


Assembly and Operating Instructions





max. 150 kg

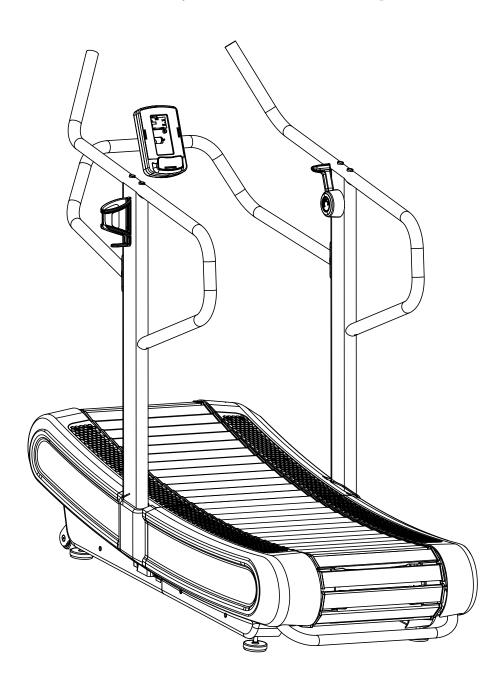

~ 30 - 60 Min.



FSTFRUNX.02.01

Art.-No. TF-RUN-X-2



Content

| 1 | GENERAL INFORMATION | 8 |
|-------|--|----|
| 1.1 | Technical Data | 8 |
| 1.2 | Personal Safety | 9 |
| 1.3 | Electrical Safety | 10 |
| 1.4 | Set-Up Place | 11 |
| 2 | ASSEMBLY | 12 |
| 2.1 | General Instructions | 12 |
| 2.2 | Scope of Delivery | 13 |
| 2.3 | Assembly | 15 |
| 3 | OPERATING INSTRUCTIONS | 19 |
| 3.1 | Console Display | 19 |
| 3.2 | Button Functions | 20 |
| 3.3 | Battery Compartment | 21 |
| 3.4 | First Steps | 21 |
| 3.5 | Pause programme - Pause mode | 22 |
| 3.6 | End programme - stop mode | 22 |
| 3.7 | Programmes | 23 |
| | Quick Start | 23 |
| 3.7.2 | Interval 10/20 and Interval 20/10 | 23 |
| 3.7.3 | Interval Custom | 24 |
| | Target Time, Target Distance and Target Calories | 24 |
| 3.7.5 | Target HR | 25 |
| 4 | STORAGE AND TRANSPORT | 26 |
| 4.1 | General Instructions | 26 |
| 4.2 | Transportation Wheels | 26 |
| 5 | TROUBLESHOOTING, CARE AND MAINTENANCE | 27 |
| 5.1 | General Instructions | 27 |
| 5.2 | Faults and Fault Diagnosis | 27 |
| 5.3 | Maintenance and Inspection Calendar | 28 |
| 6 | DISPOSAL | 28 |

| 7 | RECOMMENDED ACCESSORIES | 29 |
|-----|------------------------------|----|
| 0 | ODDEDING SDADE DADTS | 20 |
| 8 | ORDERING SPARE PARTS | 30 |
| 8.1 | Serial Number and Model Name | 30 |
| 8.2 | Parts List | 31 |
| 8.3 | Exploded Drawing | 33 |
| | I | |
| 9 | WARRANTY | 34 |
| | | |
| 10 | CONTACT | 36 |



Dear customer,

Thank you for choosing a high-quality equipment of the brand Taurus[®]. Taurus[®] offers sports and fitness equipment for the sophisticated home sport and the equipment of fitness studios and business customers. With Taurus[®] fitness equipment, the focus is on what sport is all about: maximum performance! Therefore, the equipment is developed in close consultation with athletes and sports scientists. Because athletes know best what makes perfect fitness equipment.

Further information can be found at www.fitshop.com.

Intended Use

The equipment may only be used for its intended purpose.

This fitness equipment is suitable for home use, semi-professional use and commercial or professional use. The semi-professional sector includes, for example, institutional facilities such as hospitals, schools, hotels and associations. Professional use refers to commercial use, e.g. in a fitness studio.

Legal Notice

Fitshop GmbH Europe's No. 1 for home fitness

International Headquarters Flensburger Straße 55 24837 Schleswig Germany Management:

Christian Grau

Sebastian Campmann

Dr. Bernhard Schenkel

No. HRB 1000 SL

Local Court Flensburg

European VAT Number: DE813211547

Disclaimer

© TAURUS is a registered brand of the company Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.



Europe's No.1 for Home Fitness

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.



Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.

This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

Accuracy classes

Class A: high accuracy.

Class B: medium accuracy.

Class C: low accuracy.

The use classes explain the intended use of the training device.

Use classes

Class S (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

Class H (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).



Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

↑ WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

↑ DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

LCD - display of:

- + Time
- + Speed
- + Distance
- + Calories
- + Heart rate (when using a chest strap)
- + Watt
- + Pace

Training programmes overall:

Quick Start: 1

Interval programmes: 3 (1 customized)

Target programmes: 3
Heart rate controlled programmes: 1

Weight and dimensions:

Article weight (gross, incl. packaging): 149 kg Article weight (net, excl. packaging): 128 kg

Package dimensions (LxWxH) approx.: 189 cm x 88 cm x 45.5 cm Set-up dimensions (LxWxH) approx.: 172 cm x 81 cm x 157 cm

Maximum user weight: 150 kg

Use class:



1.2 Personal Safety

↑ DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

↑ WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + If an emergency occurs and training has to be stopped abruptly, pull out the safety key, grab both handles, jump onto the side rails and wait until the treadmill has come to a complete stop.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.

ATTENTION

- + Do not insert any objects of any kind into the openings of the device.
- + To protect the equipment from use by unauthorised third parties, always remove the power cable (if existing) when not in use and store it in a safe place that is inaccessible to unauthorised persons (e.g. children).

1.3 Electrical Safety

↑ DANGER

+ In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

WARNING

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

ATTENTION

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- + If your purchased item is equipped with a TFT console, software updates must be carried out regularly. Follow the instructions on the console to perform the update(s).
- + The software systems on gym equipment with TFT consoles are set up only for the preinstalled apps. Do not install any additional apps.

(i) NOTICE

+ The pre-installed apps on TFT consoles are produced and provided by external manufacturers. Fitshop does not take any responsibility for the availability, functionality or contents of these apps.



1.4 Set-Up Place

↑ WARNING


+ Do not place the equipment in main corridors or escape routes.

CAUTION

- + Make sure that there is a safety area behind the treadmill with a length of at least 2 m and a width at least equal to the width of the treadmill.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

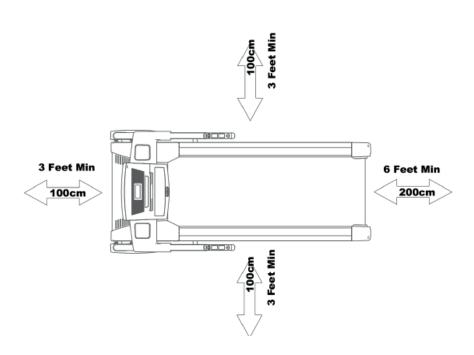

2.1 General Instructions

M DANGER

+ Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

MARNING

+ Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

CAUTION

- + Do not open the packaging when it is lying on its side.
- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

ATTENTION

+ To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

(i) NOTICE

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.




2.2 Scope of Delivery


The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.




CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

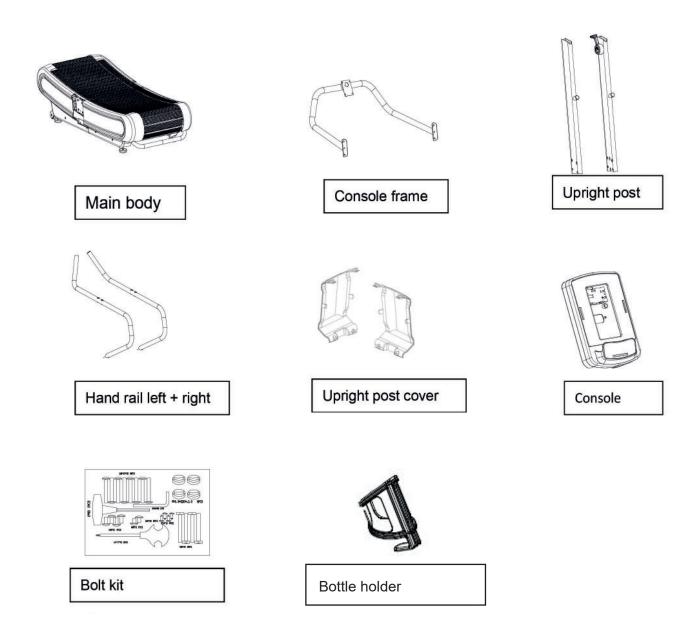

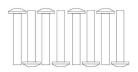

Allen head C.K.S half thread bolt M8×55×20

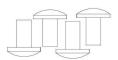

Allen head C.K.S full thread bolt M8*25



Allen head C.K.S full thread bolt M8*15



Phillip head C.K.S self-tapping screw ST4×16



Curve washer Φ8.5×R25×t2.0




Hexagon socket head full thread bolt



Philips Pan head full thread screw M4*16



T shape wrench 6*80

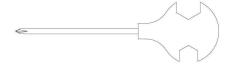

Cross open wrench 14*17*75



L shape wrench 6*35*80



2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

(i) NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.


Step 1: Mounting the console

1. Connect the cable of the console (55) with the corresponding counterpart of the console frame (4).

► ATTENTION

Be careful not to pinch the cables in the following step.

2. Fasten the console (55) to the console frame (4) with four M5*10 screws (83).

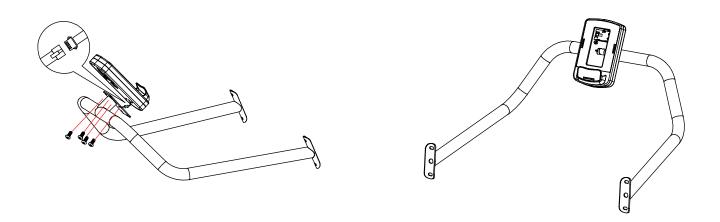


Step 2: Mounting the Console Masts

1. Connect the cables of the right upright post (2) with the cables of the main frame (1).

► ATTENTION

Be careful not to pinch the cables in the following step.

2. Fix the two upright posts (2 & 3) to the main frame (1) with four M8*55*20 bolts (78) each.

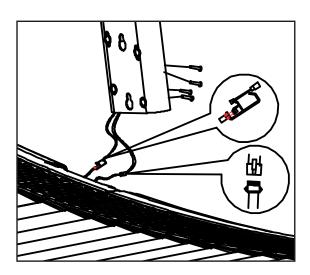






Step 3: Assembly of the handrails

Attach one handrail (6 & 105) to each of the two upright posts (2 & 3) with two M8*45 bolts (101) and one M8*15 bolt (66) each.

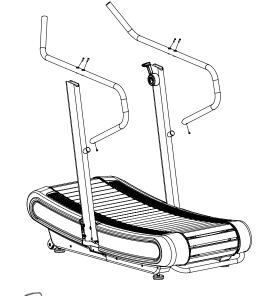


Step 4: Mounting the Console Unit

1. Connect the two cables of the right upright post (2) to their corresponding counterparts of the console frame.

► ATTENTION


Be careful not to pinch the cables in the following step.

2. Fix the console frame (4) to the two upright posts (2 & 3) with two M8*25 bolts (79) and two Ø8.5xR25xt2.0 curve washers each.

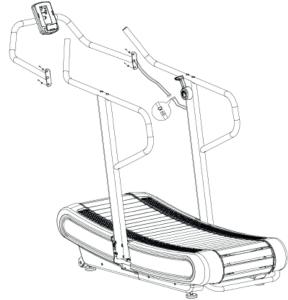

Step 5: Mounting the Covers

- 1. Fasten the covers (7 & 8) to the main frame (1) with two ST4*16 screws (97) each.
- 2. Finally, tighten all screws.

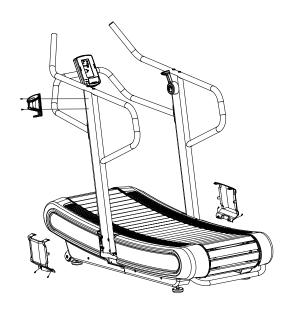


Step 6: Assembly of the bottle holder

Attach the bottle holder (110) to the left upright post (2) with two M4*16 screws (111).

Step 7: Alignment of the feet

If the floor is uneven, you can stabilize the treadmill by turning the setting screws under the main frame.

- 1. Lift the treadmill on the desired side and rotate the setting screws under the main frame.
- 2. Rotate the screws clockwise in order to remove them and to raise the running surface.
- 3. Rotate them counterclockwise in order to lower the running surface.

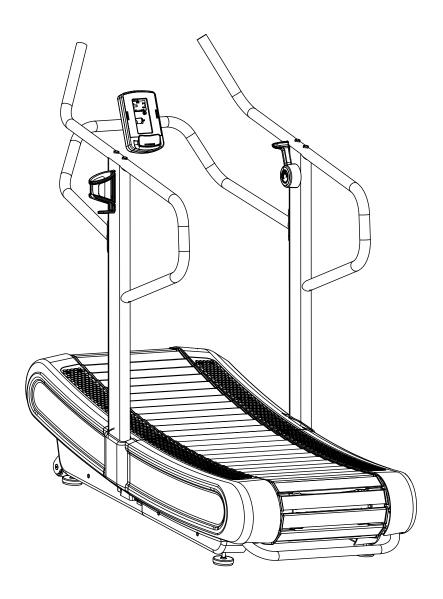



(i) NOTICE


- + Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.
- + Always start your training with low intensity and increase evenly and gently. End your training with a cool-down phase. If you are unsure, please consult your physician.
- + Most new treadmills make a knocking noise caused by the running mat sliding over the rollers. The time it takes for the noise to subside depends on the intensity of use, the temperature and the humidity around the treadmill.
- + Please bear in mind that the noise emission under load is higher than without load.

SAFETY KEY

↑ WARNING

- + For your safety, the device is equipped with an EMERGENCY STOP function. The equipment can only be operated if the safety key is correctly attached to the contact point of the cockpit. If the safety key is no longer on the contact point, the equipment automatically stops. Therefore, the Safety Key cord with the clip must be attached to your clothing before every training session. If you want to quickly stop the treadmill, if you can no longer control the speed, or if another emergency occurs, remove the safety key from the cockpit using the cord.
- + To enable the safety key to detach from the contact point of the cockpit in the event of a fall, the safety key clip must be firmly attached to your clothing!
- + Make sure that the safety key is not accessible to children.

3.1 Console Display

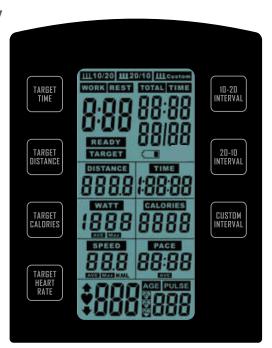



| Display | Description |
|----------|---|
| TIME | Display of the training time Display range: 00:00-1:59:00 Setting range: 1:00-1:59:00 |
| DISTANCE | Display of the training distance Display range: 0.5-100 Setting range: 0,5-100 |
| CALROIES | Display of calories burned Display range: 0-2000 Setting range: 1-2000 |
| PULSE | Heart rate display (when using a chest strap) Display range: 30-230 Setting range: 30-230 |
| WATT | + Display of watt |
| SPEED | + Display of speed |
| PACE | + Display of pace |
| LOAD | + Display of the resistance level within the watt display |

3.2 Button Functions


| Button | Description |
|---|---|
| START/PAUSE | + Start or pause the training+ Continue the training |
| STOP | + Stop the training+ 2 Sek. gedrückt halten, um Konsole neuzustarten |
| DOWN | + Decrease values |
| UP | + Increase values |
| 10/20 INTERVAL 20/10 INTERVAL CUSTOM INTERVAL | + Quick-keys for the interval programmes: + 10/20 + 20/10 + Custom |
| TARGET TIME TARGET DISTANCE TARGET CALORIES TARGET HEART RATE | + Quick-keys for the target programmes: + Time + Distance + Calories + Heart Rate |
| ENTER | + Confirm the settings + Confirm the selection |



3.3 Battery Compartment

The console is powered by two AA 1.5V batteries. In case the console is not working properly, the batteries might be running low. Follow the instructions to exchange the batteries.

- 1. Open the battery compartment cover and remove the batteries.
- 2. Insert two new AA 1.5V batteries and close the cover again.

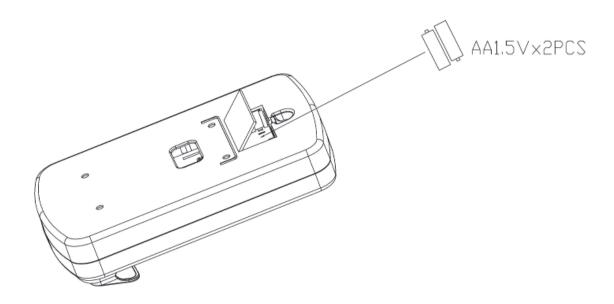


3.4 First Steps

As soon as the console is switched on, the display lights up completely (Fig. 1) and a long signal sounds. The console then enters Standby mode and the symbols for Interval 10/20, Interval 20/10, DISTANCE Target Program and PULSE (heart rate) are displayed in sequence (fig. 2-5).

(i) NOTICE

If the console does not receive any input or signal within four minutes, the console will enter sleep mode.

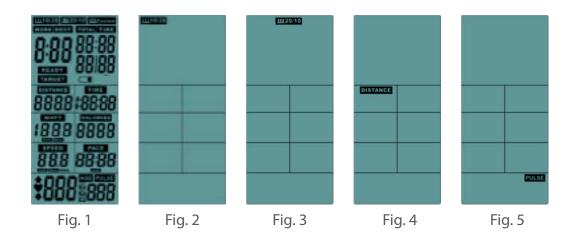

3.5 Pause programme - Pause mode

1. To pause the programme, press the START/PAUSE button once during the workout.

During the pause mode, the workout data is shown with a "P" on the display (Fig. 6) and a beep sounds for 0.5 seconds every 30 seconds.

(i) NOTICE

If the console does not receive any input within 5 minutes while in pause mode, the console goes into standby mode.

2. To resume, press the START/PAUSE key again.

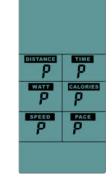


Fig. 6

3.6 End programme - stop mode

To end the programme, press the STOP button once.

- + While pressing, a signal sounds for 0.5 seconds and the console enters stop mode. After 0.5 seconds, the display will first show the DISTANCE, TIME and CALORIES values of the training session (Fig. 7).
- + After 7 seconds a short beep sounds and the maximum values of the training session for WATT, SPEED and PULSE are shown on the display (fig. 8).
- + After 7 seconds a short beep sounds and the average values of the training session for WATT, SPEED and PACE are shown on the display (fig. 9).

(i) NOTICE

The values are displayed three times in total, after which the console goes into standby mode.



Fig. 7



Fig. 8



Fig. 9



3.7 Programmes

A total of seven programmes are available:

- + Quick Start:
- + Interval programmes: 3
- + Target programmes: 3
- + Heart rate controlled programme: 1

3.7.1 Ouick Start

The quick-start function is ideal if you want to start training immediately.

↑ WARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

(i) NOTICE

Heart rate measurement is only possible with a compatible chest strap.

- To start the Quick Start function, start exercising in standby mode and press the START/PAUSE 1. button.
- 2. To pause the training, press the START/PAUSE button once.
- 3. To resume the training, press the START/PAUSE button again.
- 4. To end the training, press the STOP button.

3.7.2 Interval 10/20 and Interval 20/10

Two preset programmes are available. These programmes are divided into 8 cycles. You can choose between 10/20 or 20/10 (WORK/REST).

↑ WARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

(i) NOTICE

Heart rate measurement is only possible with a compatible chest strap.

To start a preset interval training, press the respective button and confirm with the ENTER button.

A countdown counts down from 3 to 0 and the first interval starts.

The respective interval time is counted down, all other values are counted up.

When an interval (WORK/REST) is completed, one cycle is added to the display.

- 2. To pause the programme, press the START/PAUSE button once.
- 3. To resume the programme, press the START/PAUSE button again.
- 4. To end the programme, press the STOP button or finish the training.

3.7.3 Interval Custom

↑ WARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

(i) NOTICE

Heart rate measurement is only possible with a compatible chest strap.

- 1. To select the custom interval programme, press the respective button.
- 2. To set the number of cycles (1-20), press the UP or DOWN buttons and confirm with the ENTER button.
- To set the time for the WORK sequence (0:05-30:00), press the UP or DOWN buttons and confirm with the ENTER button.
- 4. To set the time for the REST sequence (0:05-30:00), press the UP or DOWN buttons and confirm with the ENTER button.

A countdown counts down from 3 to 0 and the first interval starts.

The respective interval time is counted down, all other values are counted up.

When an interval (WORK/REST) is completed, one cycle is added to the display.

- To pause the programme, press the START/PAUSE button once. 5.
- To resume the programme, press the START/PAUSE button again. 6.
- 7. To end the programme, press the STOP button or finish the training.

3.7.4 Target Time, Target Distance and Target Calories

- To select one of the target programmes, press the respective buttong
- To set the target value, press the UP or DOWN button and confirm with ENTER. 2.

The target programme starts.

The set value is counted down, all other values are counted up.

- 3. To pause the programme, press the START/PAUSE button once.
- 4. To resume the programme, press the START/PAUSE button again.
- 5. To end the programme, press the STOP button or finish the training.



3.7.5 Target HR

WARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

(i) NOTICE

Heart rate measurement is only possible with a compatible chest strap.

- 1. To select the heart rate programme, press the respective button.
- 2. To set your age (11-99), press the UP or DOWN button and confirm with the ENTER button.
- 3. Select either 65%, 85% or your own target heart rate with the UP or DOWN buttons and confirm with the ENTER button.
- 3.1. If you want to set your own target heart rate, adjust the target heart rate with the UP or DOWN buttons and confirm with the ENTER button.
- 4. To pause the programme, press the START/PAUSE button once.
- 5. To resume the programme, press the START/PAUSE button again.
- 6. To end the programme, press the STOP button or finish the training.

i NOTICE

- + If your heart rate deviates by more than 10% from the set value, an arrow symbol in the display indicates that you should adjust your heart rate.
- + If your heart rate matches or exceeds the set value, you will hear three beeps every second. If your heart rate has not decreased after 10 repetitions, a beep will sound for one second and the console will go into standby mode.
- + If no heart rate signal is received after 30 seconds, a signal will sound for one second and the console will go into standby mode.

4.1 General Instructions

↑ WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION


Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

4.2 Transportation Wheels

ATTENTION

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

- Stand behind the equipment and lift it until the weight is transferred to the transportation wheels. 1. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
- 2. Select the new location by following the instructions in the section 1.4 of this manual.

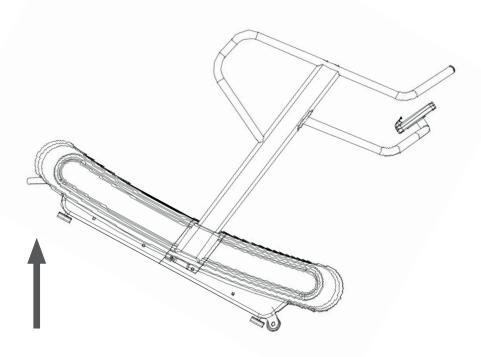



5.1 General Instructions

MARNING

+ Do not make any improper changes to the equipment.

CAUTION

+ Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

ATTENTION

+ In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

5.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

| Fault | Cause | Solution |
|---------------------------------|---|---|
| Display is blank/is not working | + Interrupted power connection+ Loose cabel connections | + Check cable connections |
| No pulse display | + Sources of interference in the room + unsuitable chest strap + Wrong position of chest strap + Chest strap defective or battery empty + Pulse display defective | Eliminate sources of interference (e.g. mobile phone, WLAN, lawn mower and vacuum cleaner robot, etc) Use a suitable chest strap (see RECOMMENDED ACCESSORIES). Reposition chest strap and/or moisten electrodes Changing batteries Check if pulse display by hand pulse possible |

5.3 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

| Part | Weekly | Monthly | Quarterly |
|--------------------------------|--------|---------|-----------|
| Display console | С | I | |
| Plastic covers | С | I | |
| Screws and cable connections | | | I |
| Legend: C = clean; I = inspect | | | |

6 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.



7

RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For treadmills this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat or **silicone spray** to keep moving parts in good shape and lubricate the running mat. Furthermore, there are additional **handrails** available for some treadmills.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible chest strap, as this ensures optimum transmission of the heart rate.



Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Alternatively, you can use the QR-code provided. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!




8.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 10 of this operating manual.

(i) NOTICE

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

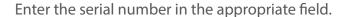



| Serial number: | | |
|--------------------|--|--|
| | | |
| | | |
| Brand / Category: | | |
| Taurus / treadmill | | |
| | | |
| Model Name: | | |
| Run X | | |
| | | |
| Article Number: | | |
| TF-RUN-X-2 | | |




8.2 Parts List

| No. | Name | Qty. | No. | Name | Qty. |
|-----|---|----------|-----|---------------------------------------|----------|
| 1 | Main frame | 1 | 32 | Driving wheel plate -Aluminum | 1 |
| 2 | Upright post - right side | 1 | 33 | Aluminum slat fixing belt | 2 |
| 3 | Upright post - left side | 1 | 34 | EVA mat - t2.0×50×3600 | 2 |
| 4 | Console frame | 1 | 35 | Front plastic side cover - right side | 1 |
| 5 | Rear main frame lifting handle | 1 | 36 | Front plastic side cover - left side | 1 |
| 6 | Handrail - right side | 1 | 37 | Rear plastic side cover - right side | 1 |
| 7 | Curve cover fixing support - right | 1 | 38 | Rear plastic side cover - left side | 1 |
| | side | | 39 | Upright post side cover - right side | 1 |
| 8 | Curve cover fixing support - left side | 1 | 40 | Upright post side cover - left side | 1 |
| 9 | Front foot- right side | 1 | 41 | Front foot stop | 4 |
| 10 | Front foot- left side | 1 | 42 | EVA mat - t5.0×70×3000 | 1 |
| 11 | Rear foot- right side | 1 | 43 | Top section resistance cable L - | 1 |
| 12 | Rear foot- left side | 1 | | 1150mm | |
| 13 | Magnet bracket | 1 | 44 | Top section resistance cable L - 450 | 1 |
| 14 | Adjustable resistor fixing bracket | 1 | 45 | Round magnet | 4 |
| 15 | Rear roller adjustable bracket | 2 | 46 | Brake tension spring | 1 |
| 17 | Curve cover reinforcement plate - | 1 | 47 | Aluminum slat | 60 |
| 1.0 | right side | 1 | 48 | Double hole Washer - t1.5*20*10 | 120 |
| 18 | Curve cover reinforcement plate - left side | 1 | 49 | Manual adjustable handle | 1 |
| 19 | Adjustable resistor fixing plate | 2 | 50 | Stall adjustable assembly | 1 |
| 20 | Curve cover fixing bracket | 2 | 51 | Manual adjustable handle cover | 1 |
| 21 | Magnet covered plate | 2 | 52 | Manual adjustable handle side cover | 1 |
| 22 | Pulley wheel axle weldment | 1 | 53 | Stall adjustable post | 2 |
| 23 | Driving wheel axle weldment | 1 | 54 | Ordinary cylindrical spring | 1 |
| 24 | Front roller | 1 | 55 | Console | 1 |
| 25 | Rear roller | 1 | 56 | 2 pin connected wire L-1250mm | 1 |
| 26 | Motor belt - 380PJ6 | 1 | 57 | VR 3 pin connected wire L-1250mm | 1 |
| 27 | Motor belt - 260PJ6 | 1 | 58 | 2 pin connected wire L-950mm | 1 |
| 28 | Moving wheels | 2 | 59 | VR 3 pin connected wire L-950mm | 1 |
| 29 | Wheel and axle | 2 | 60 | 3 pin connected wire L-500mm | 1 |
| 30 | Driving pulley wheel -front | 1 | 61 | 2 pin - plug bottom section connect- | 1 |
| 31 | Driving wheel axle | 1 | | ed wire | <u> </u> |
| 31 | Driving wheel date | <u> </u> | 62 | Resistor VR | 1 |

| 63 | Screw fixing buckle | 4 | 90 | Hex head locknut M10 | 4 |
|----|--|----------|----------|---|-----|
| 64 | Screw fixing plate | 10 | 91 | Flat washer Ф10 | 4 |
| 65 | T shape siderail guider | 6 | 92 | Allen countersunk head full thread | 4 |
| 66 | Allen head C.K.S full thread bolt - | 12 | 02 | screw M6×15 | |
| 67 | M8*15 Allen head C.K.S full thread bolt - | 24 | 93 | Hexagon head full thread bolt M8×30 | 2 |
| 07 | M8*20 | 24 | 94 | Hexagon nut M8 | 2 |
| 68 | Hexagon head half thread bolt - M8*65*20 | 98 | 95 | Allen head C.K.S step bolt M6×50×36 | 1 |
| 69 | Hexagon socket head full thread bolt - M8*65 | 12 | 96 | Phillip pan head self-tapping screw ST3×10 | 2 |
| 70 | Bearing 608ZZ | 124 | 97 | Phillip head C.K.S self-tapping screw | 22 |
| 71 | Sleeveφ12*φ8.1*18.4 | 98 | | ST4×16 | |
| 72 | Sleeveφ12*φ8.1*14 | 12 | 98 | Phillip pan head full thread bolt M5*15 | 240 |
| 73 | Guiding pulley wheel | 12 | 99 | Phillip head C.K.S full thread screw | 3 |
| 74 | Flat washer φ8 | 110 | | M4×10 | |
| 75 | Internal Circlip φ23 | 12 | 100 | Hex head locknut M4 | 3 |
| 76 | Deep groove ball bearing 6201ZZ | 4 | 101 | Hexagon socket head full thread | 4 |
| 77 | One way bearing CSK12P | 1 | <u> </u> | bolt M8×45 | - |
| 78 | Allen head C.K.S half thread bolt M8×55×20 | 9 | 102 | Flat plug Φ38×t1.5 Hexagon socket head full thread | 4 |
| 79 | Allen head C.K.S full thread bolt | 4 | | bolt M8×15 | |
| | M8×25 | ┼ | 104 | Hex head locknut M8 | 110 |
| 80 | Curve washer Φ8.5×R25×t2.0 | 4 | 105 | Handrail - left side | 1 |
| 81 | Phillip countersunk head self-tap- | 24 | 106 | End cover t1.2×φ31 | 4 |
| 02 | ping screw | 1 20 | 107 | Hexagon lock nylon nut M6 | 1 |
| 82 | Phillip countersunk head self-tapping screw | 20 | 108 | Flat washer Φ6 | 1 |
| 83 | Phillip head C.K.S full thread screw | 4 | 109 | Spring washer φ6 | 240 |
| | M5×10 | <u> </u> | 110 | Water holder | 1 |
| 85 | Hexagon socket head full thread bolt M8×75 | 2 | 111 | Philips Pan head full thread screw M4x16 | 2 |
| 86 | Allen head C.K.S half thread bolt M8×30×20 | 2 | | | |
| 87 | Hex head locknut M8 | 3 | | | |
| 88 | Flat washer Φ8 | 3 | | | |
| 89 | Allen head C.K.S half thread bolt M10×25×15 | 4 | | | |



8.3 Exploded Drawing

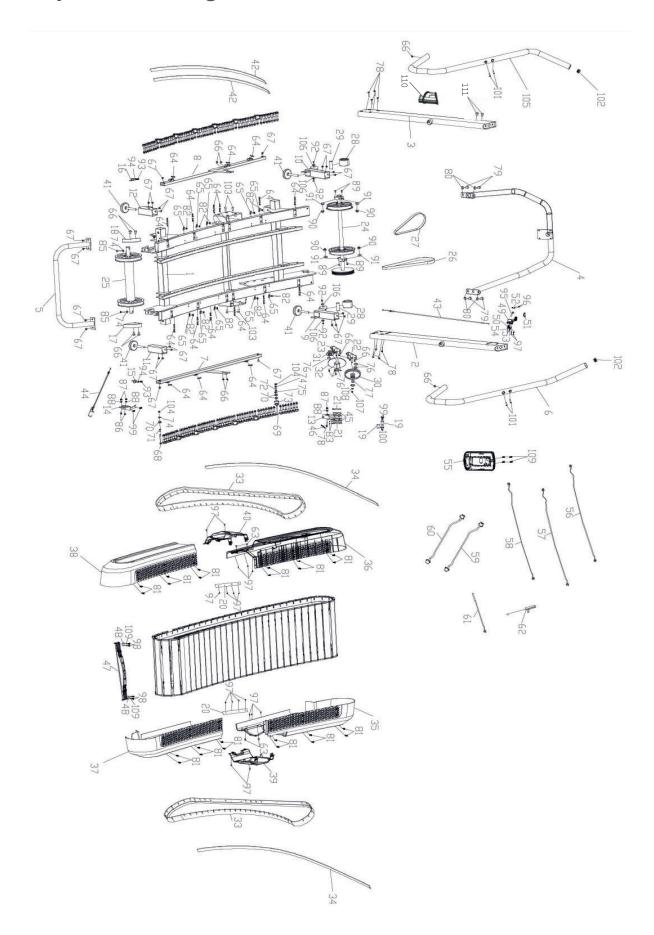

9 WARRANTY

Products from TAURUS® are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.



Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

| DE | DK | UK |
|--|--|---|
| TECHNIK | TEKNIK OG SERVICE | CUSTOMER SUPPORT |
| +49 4621 4210-900 | & 80 90 16 50 | © 00800 2020 2772 +494621 4210 944 |
| +49 4621 4210-698 | +49 4621 4210-945 info@fitshop.dk | info@fitshop.co.uk |
| technik@fitshop.de Öffnungszeiten entnehmen Sie unserer Homepage. | Åbningstider kan findes på hjemmesiden: https://stg.fit/statit7 | You can find the opening hours on our homepage: https://stg.fit/statitc |
| SERVICE | FD. | פר |
| % 0800 20 20277 (kostenlos) | FR TECHNIQUE & SERVICE | BE TECHNIQUE & SERVICE |
| & 04621 4210 - 0 | & +33 (0) 189 530984 | & 02 732 46 77 |
| info@fitshop.de | +49 4621 42 10 933 | +49 4621 4210 933 |
| Öffnungszeiten entnehmen Sie | info@fitshop.fr | info@fitshop.be |
| unserer Homepage: <u>https://stg.fit/statita</u> | Vous trouverez les heures | Vous trouverez les heures |
| | d'ouverture sur notre site Internet: | d'ouverture sur notre site Internet: |
| | https://stg.fit/statit4 | https://stg.fit/statit8 |
| | | |
| ES | NL | INT |
| ES TECNOLOGÍA Y SERVICIOS | NL TECHNISCHE DIENST & SERVICE | INT TECHNICAL SUPPORT & SERVICE |
| | | |
| TECNOLOGÍA Y SERVICIOS | TECHNISCHE DIENST & SERVICE | TECHNICAL SUPPORT & SERVICE |
| TECNOLOGÍA Y SERVICIOS 911 238 029 | TECHNISCHE DIENST & SERVICE +31 172 619961 | TECHNICAL SUPPORT & SERVICE |
| TECNOLOGÍA Y SERVICIOS 911 238 029 info@fitshop.es Consulta nuestro horario de apertura en la página web: | TECHNISCHE DIENST & SERVICE | TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@fitshop.de You can find the opening hours on our homepage: |
| TECNOLOGÍA Y SERVICIOS 911 238 029 Info@fitshop.es Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5 | TECHNISCHE DIENST & SERVICE +31 172 619961 service@fitshop.nl De openingstijden vindt u op onze homepage: https://stg.fit/statit3 | TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@fitshop.de You can find the opening hours on our homepage: https://stg.fit/statita |
| TECNOLOGÍA Y SERVICIOS 911 238 029 info@fitshop.es Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5 | TECHNISCHE DIENST & SERVICE +31 172 619961 service@fitshop.nl De openingstijden vindt u op onze homepage: https://stg.fit/statit3 | TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@fitshop.de You can find the opening hours on our homepage: https://stg.fit/statita CH |
| TECNOLOGÍA Y SERVICIOS 911 238 029 info@fitshop.es Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5 PL DZIAŁ TECHNICZNY I SERWIS 22 307 43 21 +49 4621 42 10-948 | TECHNISCHE DIENST & SERVICE +31 172 619961 service@fitshop.nl De openingstijden vindt u op onze homepage: https://stg.fit/statit3 AT TECHNIK & SERVICE 0800 20 20277 (Freecall) +49 4621 42 10-0 | TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@fitshop.de You can find the opening hours on our homepage: https://stg.fit/statita CH TECHNIK & SERVICE 0800 202 027 +49 4621 42 10-0 |
| TECNOLOGÍA Y SERVICIOS 911 238 029 info@fitshop.es Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5 PL DZIAŁ TECHNICZNY I SERWIS 22 307 43 21 | TECHNISCHE DIENST & SERVICE +31 172 619961 service@fitshop.nl De openingstijden vindt u op onze homepage: https://stg.fit/statit3 AT TECHNIK & SERVICE 0800 20 20277 (Freecall) | TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@fitshop.de Vou can find the opening hours on our homepage: https://stg.fit/statita CH TECHNIK & SERVICE 0800 202 027 |

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

www.fitshop.com/en/stores




WE LIVE FITNESS


WEBSHOP AND SOCIAL MEDIA

Fitshop is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equpiment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Fitshop offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

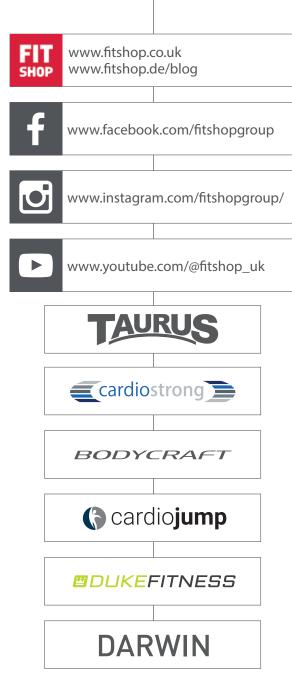

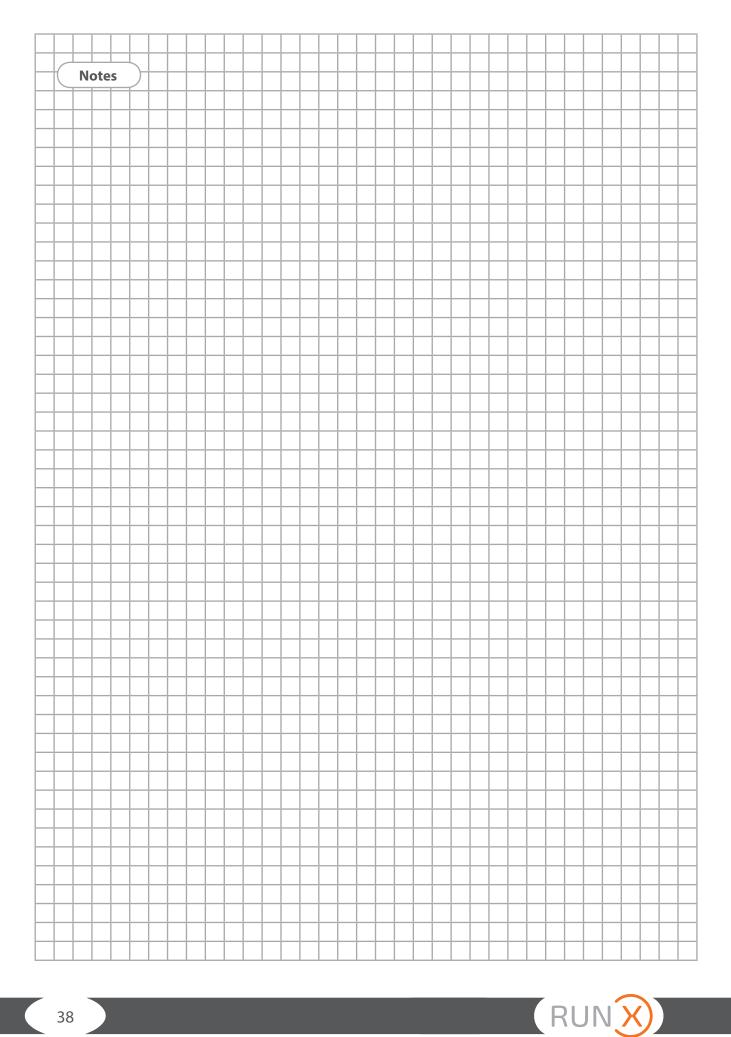



TAURUS®