



ELLIPTICAL TRAINER

OWNER'S MANUAL

*PLEASE CAREFULLY READ THIS ENTIRE MANUAL BEFORE
OPERATING YOUR ELLIPTICAL!*

TABLE OF CONTENTS

Table Of Contents

Important Safety Instructions.....	3
Important Electrical Instructions.....	4
Important Operation Instructions.....	4
Assembly Instructions.....	6
Product Features.....	13
Operation of Your Console.....	15
Programmable Features.....	18
Using A Heart Rate Transmitter.....	26
General Maintenance.....	28
Exploded View Diagram.....	29
Parts List.....	30

ATTENTION

This elliptical is intended for residential use only and is warranted for this application. Any other application voids this warranty in its entirety.

Important Safety Instructions

WARNING - Read all instructions before using this appliance.

DANGER - To reduce the risk of electric shock disconnect your elliptical from the electrical outlet prior to cleaning and/or service work.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons, install the elliptical on a flat level surface with access to a 230-volt, 10-amp grounded outlet with only the elliptical plugged into the circuit.

DO NOT USE AN EXTENSION CORD UNLESS IT IS A 18AWG OR BETTER, WITH ONLY ONE OUTLET ON THE END:

- Do not operate elliptical on deeply padded, plush or shag carpet. Damage to both carpet and elliptical may result.
- Keep children away from the elliptical. There are obvious pinch points and other caution areas that can cause harm.
- Keep hands away from all moving parts.
- Never operate the elliptical if it has a damaged cord or plug. If the elliptical is not working properly, call your dealer.
- Keep the cord away from heated surfaces.
- Do not operate where aerosol spray products are being used or where oxygen is being administered. Sparks from the motor may ignite a highly gaseous environment.
- Never drop or insert any object into any openings.
- Do not use outdoors.
- To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- Do not attempt to use your elliptical for any purpose other than for the purpose it is intended.
- The hand pulse sensors are not medical devices. Their purpose is to provide you with an approximate measurement in relation to your target heart rate. Use of a chest transmitter strap (sold separately) is a much more accurate method of heart rate analysis. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensors are intended only as exercise aids in determining heart rate trends in general.
- Wear proper shoes. High heels, dress shoes, sandals or bare feet are not suitable for use on your elliptical. Quality athletic shoes are recommended to avoid leg fatigue.

SAVE THESE INSTRUCTIONS - THINK SAFETY!

Important Electrical Instructions

WARNING!

NEVER remove any cover without first disconnecting AC power. If voltage varies by ten percent (10%) or more, the performance of your elliptical may be affected. Such conditions are not covered under your warranty. If you suspect the voltage is low, contact your local power company or a licensed electrician for proper testing.

NEVER expose this elliptical to rain or moisture. This product is NOT designed for use outdoors, near a pool or spa, or in any other high humidity environment. The operating temperature specification is 40 to 120 degrees Fahrenheit, and humidity is 95% non-condensing (no water drops forming on surfaces).

Grounding Instructions

This product must be grounded. If the elliptical should malfunction or breakdown, grounding provides a path of least resistance for electric current, reducing the risk of electric shock. This product is equipped with a cord having an equipment-grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product if it will not fit the outlet; have a proper outlet installed by a qualified electrician.

Important Operation Instructions


- **NEVER** operate this elliptical without reading and completely understanding the results of any operational change you request from the computer.
- Understand that changes in resistance do not occur immediately. Set your desired resistance level on the computer console and release the adjustment key. The computer will obey the command gradually.
- **NEVER** use your elliptical during an electrical storm. Surges may occur in your household power supply that could damage elliptical components. Unplug the elliptical during an electrical storm as a precaution.
- Use caution while participating in other activities while pedaling on your elliptical; such as watching television, reading, etc. These distractions may cause you to lose balance which may result in serious injury.
- Do not use excessive pressure on console control keys. They are precision set to function properly with little finger pressure.

Assembly Instructions


PRE-ASSEMBLY

1. Using a razor knife (Box Cutter), cut the banding straps that wrap around the carton. Reach under the bottom edge of the carton and pull it away from the cardboard underneath, separating the staples that join the two together. Lift the box over the unit and unpack.
2. Carefully remove all parts from carton and inspect for any damage or missing parts. If damaged parts are found, or parts are missing, contact your dealer immediately.
3. Locate the hardware package. The hardware is separated into four steps. Remove the tools first. Remove the hardware for each step as needed to avoid confusion. The numbers in the instructions that are in parenthesis (**#**) are the item number from the assembly drawing for reference.


Assembly Tools

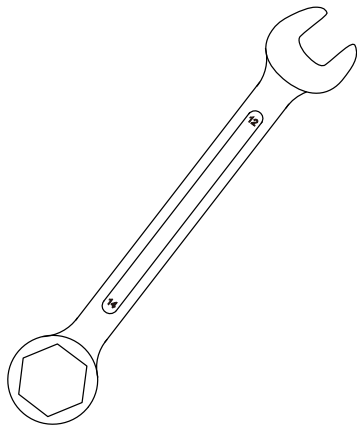

#158. 12/14mm Wrench (1 pc)

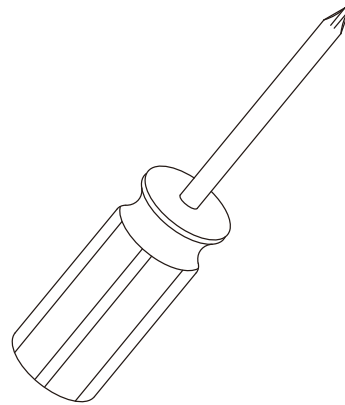

#157. Phillips Head Screw driver (1 pc)

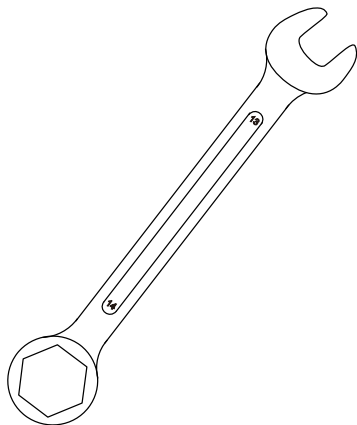


#155. 13/14mm Wrench (1 pc)


STEP 1: Incline Rail & Console Mast

1. Slide the Incline Rail Assembly (2) into the U channel of the Main Frame (1). Be very careful not to damage the wires that exit each part.
2. Connect the Incline Rail Assembly (2) horizontally to the U channel of the Main Frame (1) with two Hex Head Bolts (104), two Flat Washers (137), and two Nyloc Nuts (130). Secure it vertically with four Hex Head Bolts (185), four Split Washers (151), four Flat Washers (142), and four Star Washers (154). Tighten using the Wrenches provided (155 & 158).
3. Connect the Incline Motor wires (46 & 47) to the wiring harness & black wire that exits the Incline Rail Assembly (2). Push the excess cable inside the U channel.
4. Locate the Console Mast (12) and Console Mast Cover (72); slide the Cover onto the mast as far as it will go. Make sure the Console Mast Cover (72) is facing the correct way.
5. At the top opening of the Main Frame (1), there is a Hand Pulse Cable (53) tied to a twist tie wire. Feed the twist tie wire and Hand Pulse Cables (53) into the bottom of the Console Mast (12) and out of the opening at the top.
6. Install the Console Mast (12) into the receiving bracket on the top of the Main Frame (1). Be extremely careful not to pinch the cables between the tubing. If the cable gets pinched, this may affect the electrical functions of the console. **NOTE:** there is one bolt already installed in the receiving bracket that will engage with the slot at the bottom of the Console Mast. This needs to be tightened last, after the three other Console Mast bolts.
7. Place a Split Washer (152) onto the Hex Head Bolt (105) and hand tighten through the left side of the Console Mast. Place a Curved Washer (153) onto each Hex Head Bolt (103) and thread both into the front of the Console Mast tube. Fasten these front bolts as tight as possible with the Wrench (155). Next firmly tighten the two left side bolts with the same wrench.
8. Connect the two Hand Pulse Cables (53), Resistance Cable (55), and Incline Cable (56) to the back of the console (43). Do not force the connectors; they will only fit one way and are different sizes to prevent confusion. Store the excessive cable in the Console Mast tube (12).
9. Attach the Console (43) to the bracket of the Console Mast tube with four Phillips Head Screws (116). Tighten the screws with the Phillips Head Screw Driver (157).


HARDWARE

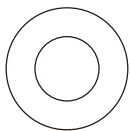

#137. 3/8" x 19 x 1.5T
Flat Washer
(2 pcs)

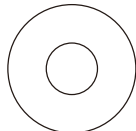

#142. 5/16" x 20 x 1.5T
Flat Washer
(4 pcs)

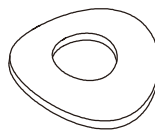

#153. 3/8" x 23 x 2T
Curved Washer
(2 pcs)



#152. 3/8" x 2T
Split Washer
(1 pc)



#116. M5 x 10m/m
Phillips Head Screw
(4 pcs)




#130. 3/8" x 7T
Nyloc Nut
(2 pcs)




#151. 5/16" x 1.5T
Split Washer
(4 pcs)




#154. Ø 5/16"
Star Washer
(4 pcs)




#103. 3/8" x 3/4"
Hex Head Bolt
(2 pcs)




#185. 5/16" x 2-1/4"
Hex Head Bolt
(4 pcs)




#104. 3/8" x 1-1/2"
Hex Head Bolt
(2 pcs)



#105. 3/8" x 2-1/4"
Hex Head Bolt
(1 pc)

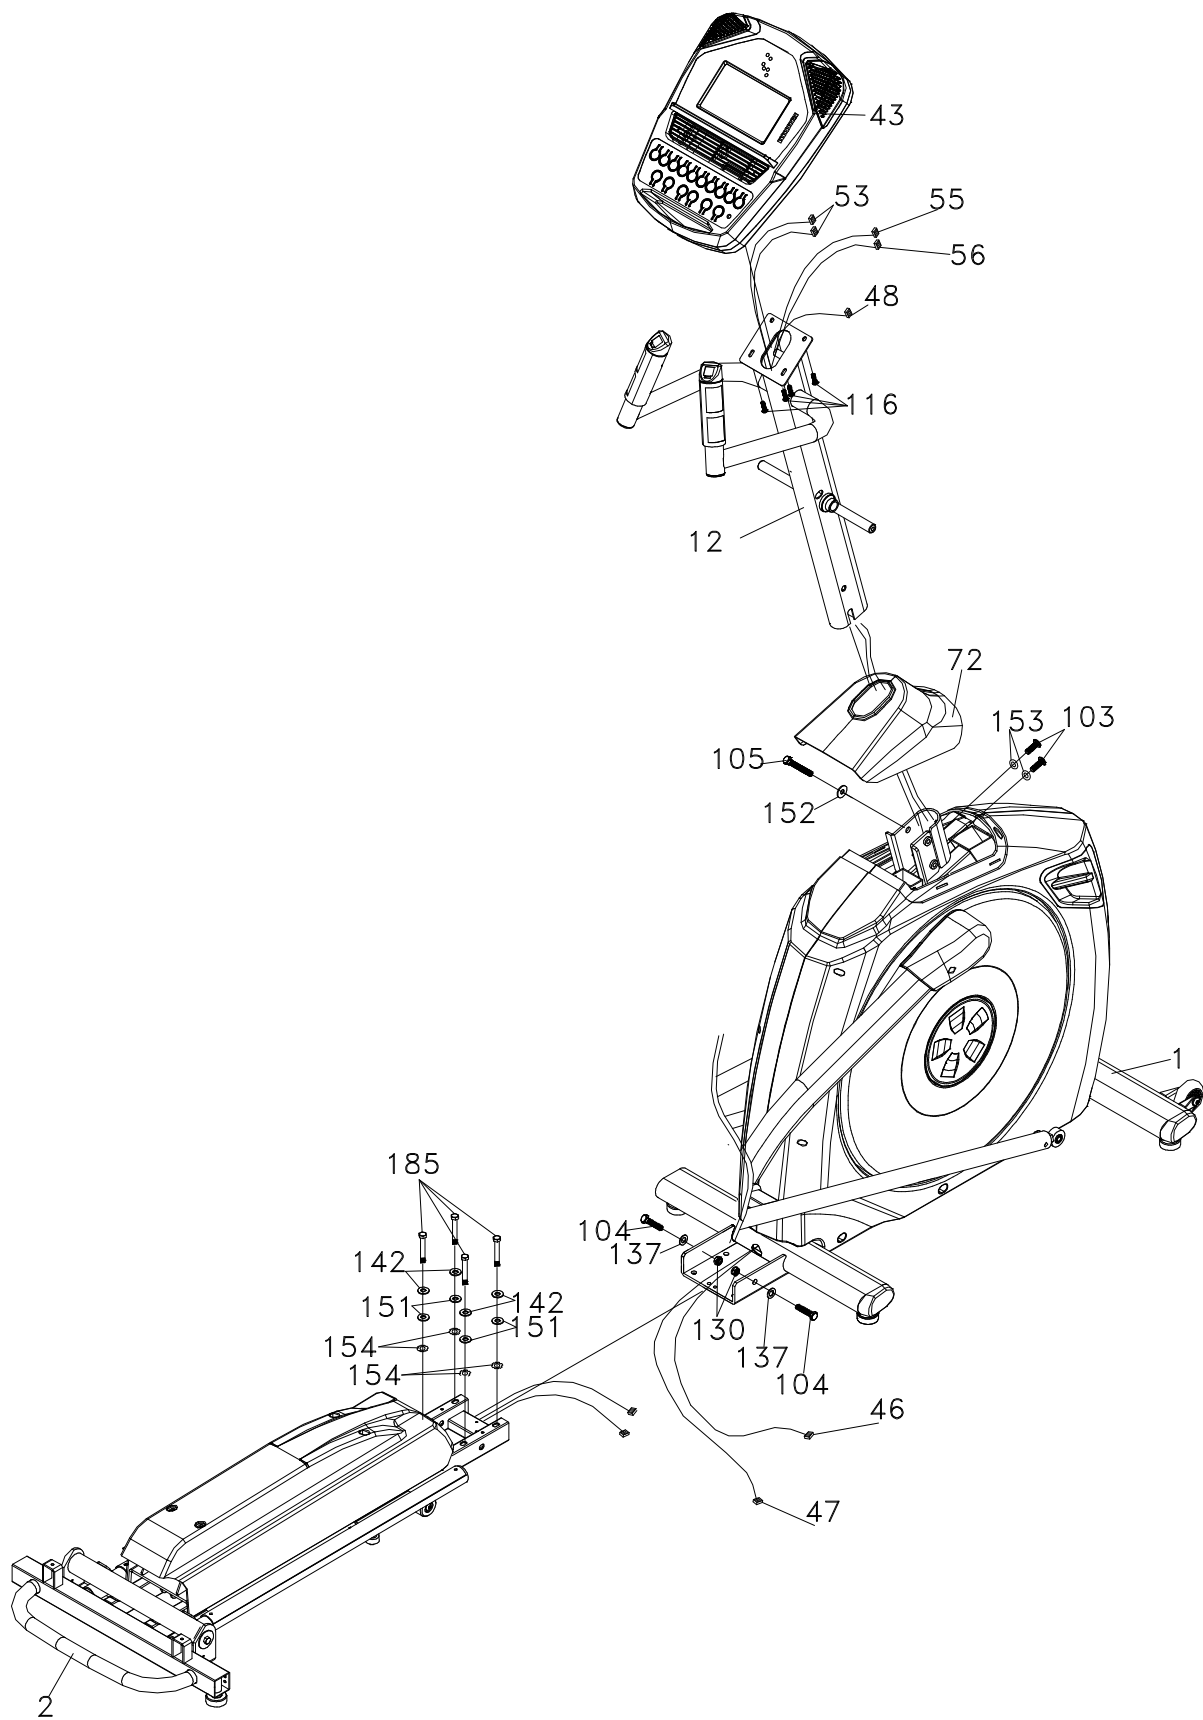


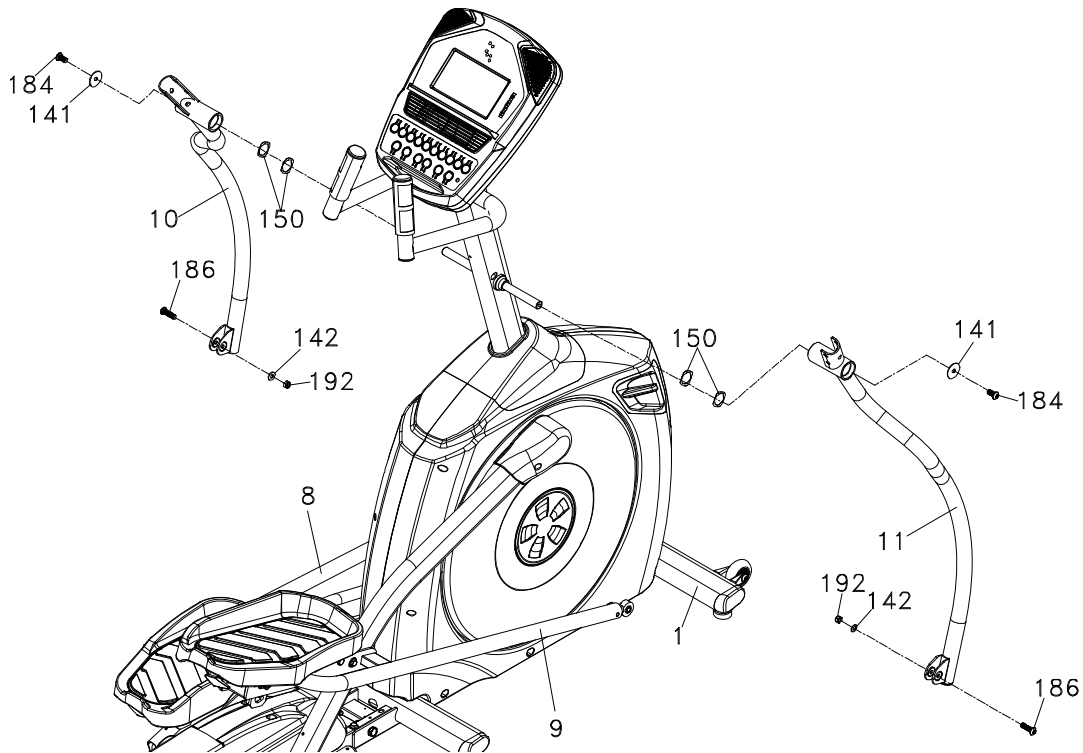

STEP 2: Connecting & Lower Swing Arms

1. Slide two Wave Washers (**150**) onto each side of the Swing Arm Axle. Slide the Lower Swing Arms (**10** Left, **11** Right) onto the axles and secure with the two Hex Head Bolts (**184**) and Flat Washers (**141**). Do not force the Swing Arms onto the axle. They should slide on, but you may need to jiggle them to get them lined up properly. The Swing Arms have been previously installed at the factory so they do fit properly.
2. Remove the tie that holds the spacer in the rod end located at the end of the Right Connecting Arm (**9**) and line up the rod end with the bracket at the bottom of the Lower Right Swing Arm (**11**). Slide the Hex Head Bolt (**186**) through the bracket of the Lower Swing Arm and then through the rod end and spacer. Install the Flat Washer (**142**) and Nyloc Nut (**192**) on the bolt and tighten as much as possible. Repeat this step for the left side. Tighten using the Wrenches (**155 & 158**).

HARDWARE

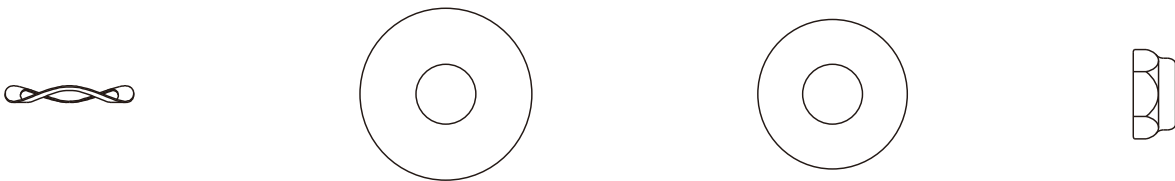


#150. Ø 17 m/m
Wavy Washer (4 pcs)


#141. 5/16" x 23 x 1.5T
Flat Washer (2 pcs)

#142. 5/16" x 20 x 1.5T
Flat Washer (2 pcs)


#192. 5/16" x 9T
Nyloc Nut (2 pcs)



#184. 5/16" x 15mm
Hex Head Bolt (2 pcs)




#186. 5/16" x 1- 1/4"
Hex Head Bolt (2 pcs)

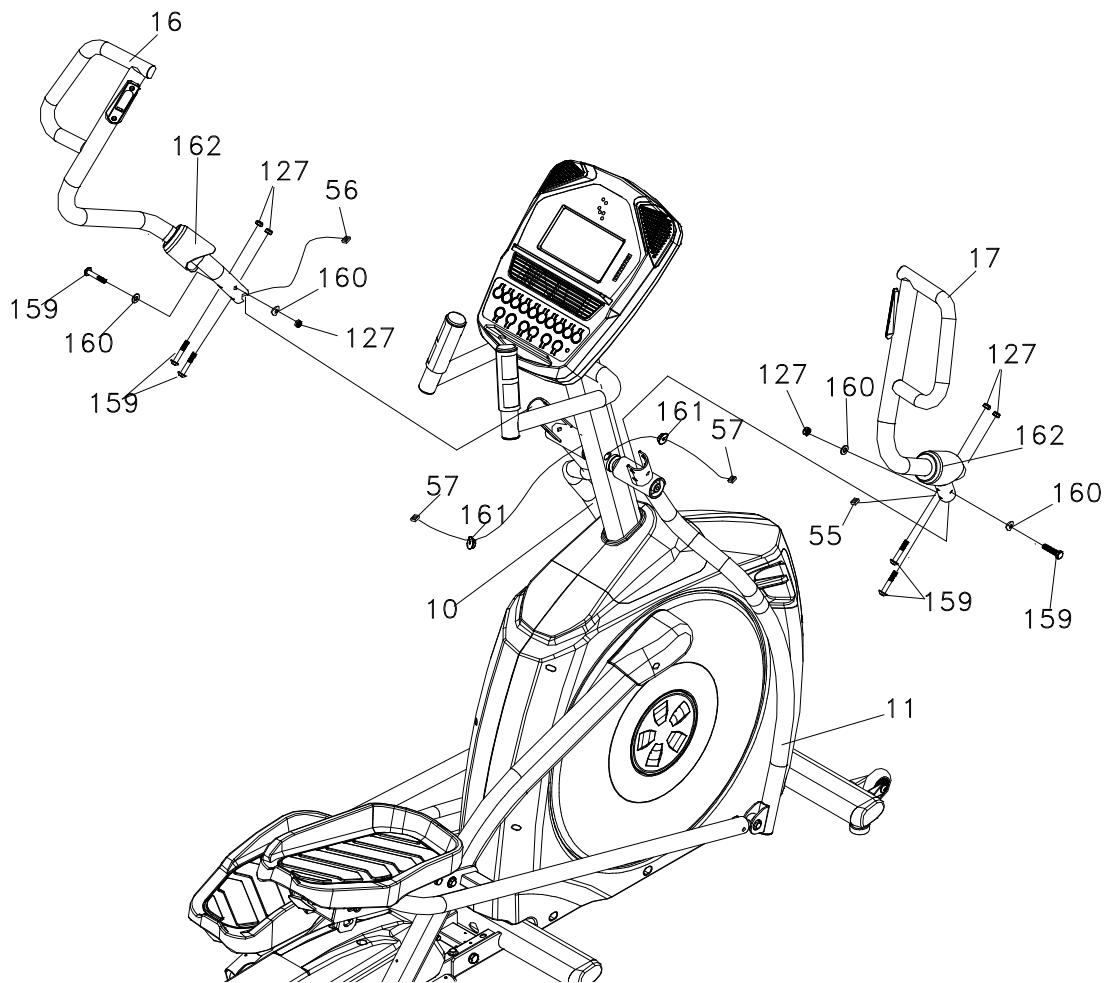


STEP 3: Upper Swing Arms

1. Slide the Rubber Sleeve (**162**) onto the left (**16**) and right (**17**) Upper Swing Arms. Make sure the wide part is at the bottom.
2. Attach the wire (**55**) from the Right Upper Swing Arm (**17**) to the wire (**57**) that exits the Console Mast tube (**12**). Slide the Switch Wire Cap (**161**) onto the wire with the wide side facing the Swing Arm.
3. Attach the wire (**56**) from the Left Upper Swing Arm (**16**) to the wire (**57**) that exits the Console Mast tube (**12**). Slide the Switch Wire Cap (**161**) onto the wire with the wide side facing the Swing Arm.
4. Insert the Upper Swing Arm (**17**) into the Lower Swing Arm. Fasten together with three Hex Head Bolts (**159**), two Curved Washers (**160**), and three Nyloc Nuts (**127**).
5. Repeat step 3.3 from above on the left side.

HARDWARE

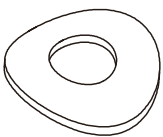


#160. 5/16" x 23 x 1.5T
Curved Washer (4 pcs)



#159. 5/16" x 1-3/4"
Hex Head Bolt (6 pcs)



#127. 5/16" x 7T
Nyloc Nut (6 pcs)

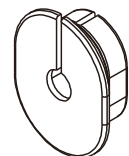


#161. Switch Wire Cap
(2 pcs)

STEP 4: Plastic Parts

1. Install the two Wheel Covers (**79-Left & 80-Right**) with four Phillips Head Screws (**115**).
2. Install the Center Cover (**85**) with two Phillips Head Screw (**115**). You need to raise the incline to install the Center Cover.
3. Install the Swing Arm End Cap Covers (**81 & 82-Left, 83 & 84-Right**) with the eight Sheet Metal Screws (**119**).
4. Install the two 'Z' shaped metal brackets (**180**) as shown with four Phillips Head Screws (**122**).
The Z Brackets should be installed so the tab with the tapped hole is pointing toward the rear.
5. Install the Rear Incline Cover (**87**) with two Phillips Head Screws (**115**). Install the Rear Stabilizer Cover (**88**) with four Phillips Head Screws (**115**).

HARDWARE




#119. 3.5 x 12mm
Sheet Metal Screw
(8 pcs)



#115. M5 x15mm
Phillips Head Screw
(12 pcs)



#122. M6 x 10mm
Phillips Head Screw
(4 pcs)

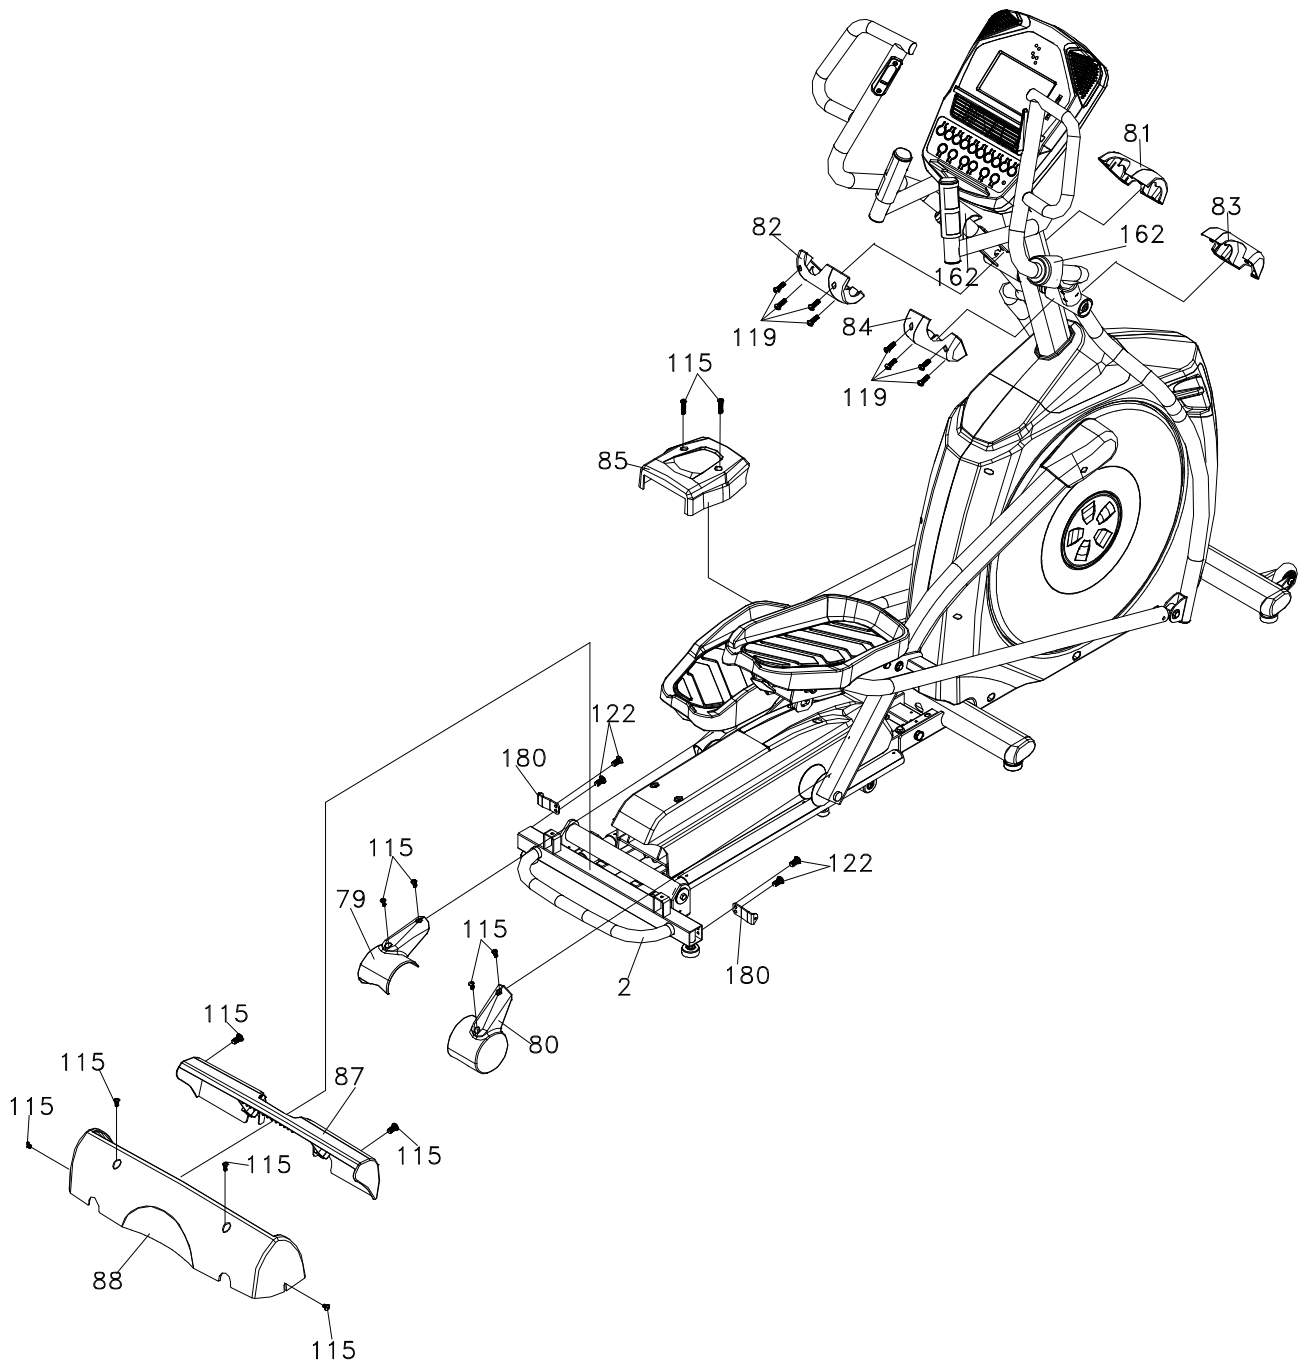

Product Features

Footpads

The Foot pedals are adjustable to meet the user's style of pedaling the elliptical. There are three positions available with a simple pull-pin adjustment located under the footpads (see illustration below). The lowest position will set the footpads at zero (0) degrees, or flat at the bottom of the elliptical stroke. The second position sets the footpad at five (5) degrees and the top position sets the footpads at ten (10) degrees.

Because everybody is different, we found there is no one angle that fits every user. Some users are up on the balls of their feet, resulting in numb toes, so we decided to allow the user to adjust the back of the foot pad upward to support the heel, taking the pressure off of the nerves in the balls of the feet and the Achilles tendon. The result was relief from the toes going numb. Some users are uncomfortable at a fixed angle, therefore we added the adjustable pedal angles so they could find one that feels best for them. A great side benefit of the adjustable footpad angle is that you end up working the muscles of the lower extremities in a different way. At the highest angle, you will work the quadriceps more. At the lowest angle, you work the hamstrings and gluts harder.




Console

MUSCLE ACTIVATION FIGURE

There is an anatomical figure located at the top of the console. This figure will light all areas that are activated when using the elliptical. These will light up during any of the programs. You can control which muscles are activated by changing the incline and swinging your arms. The pre-set programs will determine which lower body muscles will be activated by automatically adjusting the incline. Generally the following guidelines hold true:


- The upper body LED's will light any time your hands aren't in contact with the pulse grip sensors.
- The lower body lights will activate in three degrees of engagement: Green represents minimal muscle involvement, Amber represents medium involvement, and Red represents full or heavy activation.
- Forward pedal rotation
 - Levels 0-7.5 Incline: Amber - Gluteals and Quadriceps light up; Green - Hamstrings and Calves light up.
 - Levels 8-20 Incline: Red – Gluteals light up, Amber – Quadriceps light up, Green – Hamstrings and Calves Light up.
- Reverse Pedal rotation
 - Levels 0-7.5 Incline : Amber – Calves, Hamstrings, and Quadriceps light up; Green – Gluteals lights up.
 - Levels 8-20 Incline: Red – Calves, Hamstrings, and Quadriceps light up; Green- Gluteals lights up.

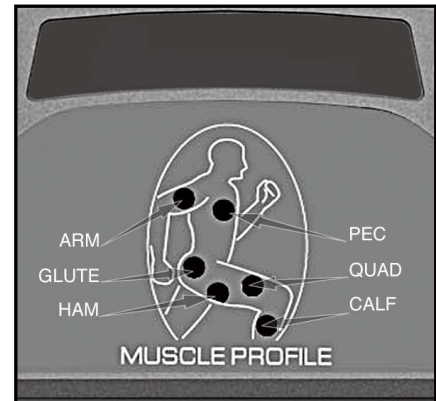

Heart Rate % Profile

The console LCD screen will display your current heart rate anytime a pulse is detected. The Bar Graph, located to the right of the LCD screen, will show your current heart rate % in relation to your projected maximum heart rate, which is determined by your age that you entered during the programming phase of any of the 10 programs. The significance of the bar graph colors are as follows:

- 50-60% of maximum is Amber
- 65-80% of maximum is Amber and Green
- 85-90% or more is Amber, Green, and Red

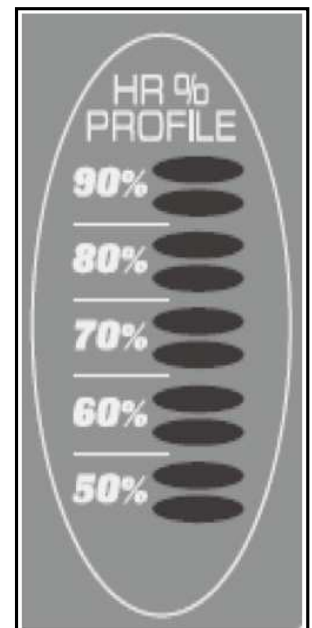

Operation Of Your Console

GETTING FAMILIAR WITH THE CONTROL PANEL



Power

When the A.C. power cord is connected to the elliptical, the console will automatically power up. If there is no input to the console for 20 minutes the console will go to stand-by mode. In stand-by mode the console display will turn off. To turn the console on press any key.

When initially powered on the console will perform an internal self-test. During this time all the lights will turn on. When the lights go off, the Message Center will show the software version (i.e.: VER 1.0). The distance window shows the distance total and the time window shows the total hours of use.

The odometer will remain displayed for only a few seconds then the console will go to the start up display. The dot matrix display will be scrolling through the different profiles of the programs and the Message Center will be scrolling the start up message. You may now begin to use the console.

Quick Start

This is the quickest way to start a workout. After the console powers up you just press the **Start** key to begin, this will initiate the Quick Start mode. In Quick Start the Time will count up from zero and the workload may be adjusted manually by pressing the **Level Up/Down** buttons. The dot matrix display will have only the bottom row lit at first. As you increase the work load more rows will light indicating a harder workout. The elliptical will get harder to pedal as the rows increase.



There are 20 levels of resistance available for plenty of variety. The first 5 levels are very easy workloads and the changes between levels are set to a good progression for de-conditioned users. Levels 6-10 are more challenging, but the increases in resistance from one level to the next remain small. Levels 11-15 start getting tough as the levels jump more dramatically. Levels 16-20 are extremely hard and are good for short interval peaks and elite athletic training.

Basic Information

The Message Center will initially be displaying the Program name. When in scan mode during a program, Speed will be displayed for four seconds, then move on and display Watts (indication of workload). If 100 watts is displayed, you are doing enough work to keep a 100-watt light bulb lit. The data changes to Segment Time, Laps completed, Max level. Pressing the **Enter** button again will bring you back to the beginning.



The **Stop** button actually has several functions. Pressing the **Stop** key once during a program will pause the program for 5 minutes. If you need to get a drink, answer the phone or any of the many things that could interrupt your workout, this is a great feature. To resume your workout during Pause, just press the **Start** key. If the **Stop** button is pressed twice during a workout the program will end and the console will display your Workout Summary (Total time, Avg. Speed, Avg. Watts, Avg. HR, total Laps). If the **Stop** key is held down for 3 seconds or a third time during the program, the console will perform a complete **Reset**. During data entry for a program the **Stop** key performs a previous screen or segment function. This allows you to go back to change programming data.



Program Keys

The Program Keys are used to preview each program. When you first turn the console on you may press each program key to preview what the program profile looks like. If you decide that you want to try a program, press the corresponding program key and then press the **Enter** key to select the program and enter into the data-setting mode.

The elliptical has a built in heart rate monitoring system. Simply grasping the hand pulse sensors on the stationary handle bars, or wearing the heart rate transmitter (see Using Heart Rate Transmitter section) will start the Heart Icon blinking (this may take a few seconds). The Pulse Display Window will display your heart rate, or Pulse in beats per minute.

The consoles include a built-in fan to help keep you cool. To turn the fan on, press the button on the left side of the console.

Programming The Console

Each of the programs can be customized with your personal information and changed to suit your needs. Some of the information asked for is necessary to ensure the readouts are correct. You will be asked for your Age and Weight. Entering your Age is necessary during the Heart Rate programs to ensure the correct settings are in the program for your Age. Otherwise the work settings could be too high or low for you. Entering your Weight aides in calculating a more correct Calorie reading. Although we cannot provide an exact calorie count, we do want to be as close as possible.

CALORIE NOTE: Calorie readings on every piece of exercise equipment, whether it is in a gym or at home, are not accurate and tend to vary widely. They are meant only as a guide to monitor your progress from workout to workout. The only way to measure your calorie burn accurately is in a clinical setting connected to a host of machines. This is because every person is different and burns calories at a different rate. Some good news is that you will continue to burn calories at an accelerated rate for at least an hour after you have finished exercising!

Entering A Program And Changing Settings

When you enter a program, by pressing a program key, then **Enter** key, you have the option of entering your own personal settings. If you want to workout without entering new settings, then just press the **Start** key. This will bypass the programming of data and take you directly to the start of your workout. If you want to change the personal settings then just follow the instructions in the Message Center. If you start a program without changing the settings, the default or saved settings will be used.

NOTE: Age and Weight default settings will change when you enter a new number. So the last Age and Weight entered will be saved as the new default settings. If you enter your Age and Weight the first time you use the elliptical, you will not have to enter it every time you work out unless either your Age or Weight changes, or someone else enters a different Age and Weight.

Programmable Features

MANUAL

The Manual program works as the name implies, manually. This means that you control the workload and not the computer. To start the Manual program, follow the instructions below or just press the **Manual** button, then the **Enter** button and follow the directions in the Message Center.

1. Press the **Manual** key, then press the **Enter** key.
2. The Message Center will ask you to enter your Age. You may enter your age, using the **Up/Down** keys, then press the **Enter** key to accept the new value and proceed on to the next screen.
3. You are now asked to enter your Weight. You may adjust the Weight value using the **Up/Down** keys, then press **Enter** to continue.
4. Next is Time. You may adjust the Time and press **Enter** to continue.
5. Now you are finished editing the settings and can begin your workout by pressing the **Start** key. You can also go back and modify your settings by pressing the **Enter** key.
6. Once the program starts you will be at level one. This is the easiest level and it is a good idea to stay at level one for a while to warm up. If you want to increase the work load at any time press the **Up** key; the **Down** key will decrease the work-load.
7. During the Manual program you will be able to scroll through the data in the Message Center by pressing the **Enter** key.
8. When the program ends you may press **Start** to begin the same program again or **Stop** to exit the program or you can save the program you just completed as a custom user program by pressing a **User** key and following the instructions in the Message Center.



Preset Programs


The elliptical has five different programs that have been designed for a variety of workouts. These five programs have factory preset work level profiles for achieving different goals.

Hill


Resistance: This program follows a triangle or pyramid type of gradual progression from approximately 10% of maximum effort (the level that you chose before starting this program) up to a maximum effort which lasts for 10% of the total workout time, then a gradual regression of resistance back to approximately 10% of maximum effort.

Incline: The pedal elevation is a more gradual and sustained progression. Maximum elevation is in the middle of the workout and lasts for 10% of the duration

RESISTANCE

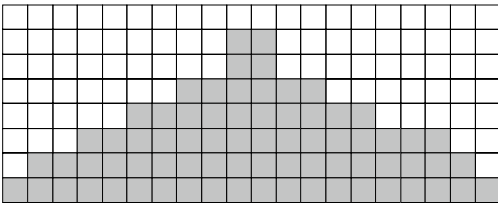

INCLINE

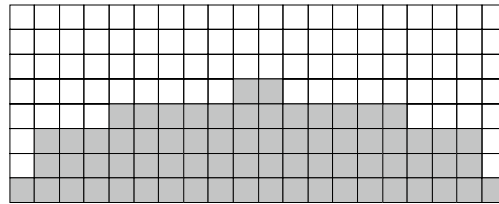


Fat Burn


Resistance: This program follows a quick progression up to the maximum resistance level (default or user input level) that is sustained for 2/3 of the workout. This program will challenge your ability to sustain your energy output for an extended period of time.

Incline: The pedal elevation is a quick and sustained progression up to the maximum value (default or user input) for 90% of the workout duration.

RESISTANCE

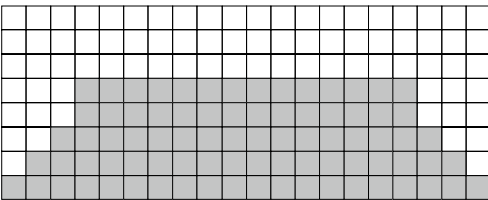

INCLINE

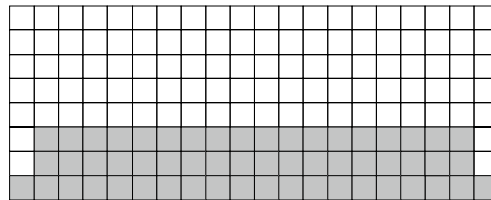


Cardio


Resistance: This program presents a quick progression up to near maximum resistance level (default or user input level). It has slight fluctuations up and down to allow your heart rate to elevate, and then recover repeatedly, before beginning a quick cool down. This will build up your heart muscle and increase blood flow and lung capacity.

Incline: The elevation in this program is moderate. There are several elevation spikes at different points of the workout. Segments 4, 9, and 14 are maximum elevation for this program.

RESISTANCE

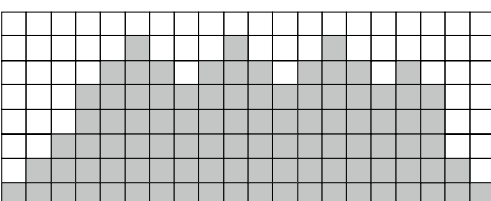

INCLINE

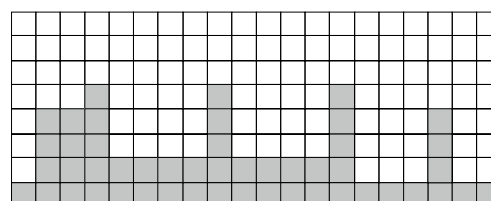


Interval


Resistance: This program takes you through high levels of intensity followed by recovery periods of low intensity. This program utilizes and develops your “Fast Twitch” muscle fibers which are used when performing tasks that are intense and short in duration. These deplete your oxygen level and spike your heart rate, followed by periods of recovery and heart rate drop to replenish oxygen. Your cardiovascular system gets programmed to use oxygen more efficiently.

Incline: This program will spike similar to the resistance profile, but in different segments (columns); this means that all of your lower extremity muscles will be equally challenged throughout this program. The incline alternates between 25 & 65 % of maximum elevation.

RESISTANCE

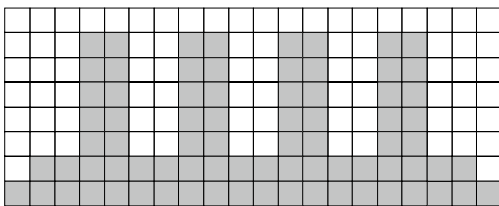


INCLINE

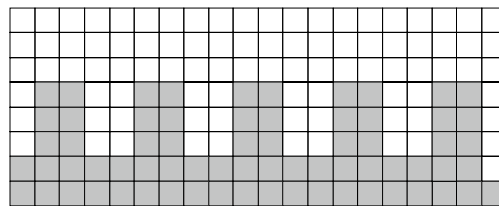

Programming Preset Programs

1. Select the desired program button then press the **Enter** key.
2. The Message Center will ask you to enter your Age. You may adjust the age setting, using the **Level Up/Down** keys, then press the **Enter** key to accept the new number and proceed on to the next screen.
3. You are now asked to enter your Weight. You may adjust the Weight value using the **Level Up/Down** keys, then press **Enter** to continue.
4. Next is Time. You may adjust the time and press **Enter** to continue.
5. Now you are asked to adjust the Max Resistance Level. This is the peak exertion level you will experience during the program. Adjust the level and then press **Enter**.
6. Now you are asked to adjust the Incline on/off. Adjust the Incline on/off and then press **Enter**.
7. Now you are asked to adjust the Max Incline level. This is the peak exertion level you will experience during the program. Adjust the level and then press **Enter**.
8. Now you are finished editing the settings and can begin your workout by pressing the **Start** key. You can also go back and modify your settings by pressing the **Enter** key.
9. If you want to increase or decrease the resistance at any time during the program, press the **Level Up/Down** keys on the console or above the heart rate sensor grips of the stationary handlebars. This will change the resistance settings of the entire profile, although the profile picture on the screen will not change. The reason for this is so that you can see the entire profile at all times. If the profile picture is changed, it also would be distorted and not a true representation of the actual profile. When you make a change to the resistance, the Message Center will show the current column and program maximum levels of work.
10. During the program you will be able to scroll through the data in the message window by pressing the **Enter** key.
11. When the program ends the Message Center will show a summary of your workout. The summary will be displayed for a short time, then the console will return to the start-up display.

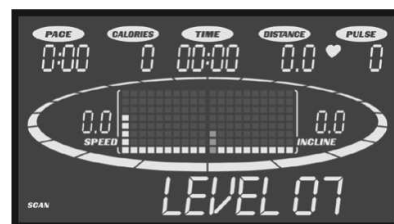

Watts Program operation (Not to be used for medical purposes)

The Watts program provides a constant power mode that automatically adjusts the resistance level at the pedals whenever you change speeds to keep you working at a constant power level. Another way to think of this program is that it keeps you working at a continuous rate of calorie burn. To start the **Watts** program follow the instructions below or just press the **Watts** key then the Enter button and follow the directions in the message window.

1. Press the **Watts** key then press the **Enter** key.
2. The message window will ask you to enter your **Age**. You may enter your Age, using the Up and Down keys or the numeric key pad, then press the Enter key to accept the new number and proceed on to the next screen.
3. You are now asked to enter your **Weight**. You may adjust the Weight number using the Up and Down keys or the numeric key pad then press enter to continue.
4. Next is **Time**. You may adjust the Time and press enter to continue.
5. Now you are asked to adjust the **Target Watts**. This is the constant power you will experience during the program. Adjust the up/down and then press enter.
6. Now you are finished editing the settings and can begin your workout by pressing the Start key. You can also go back and modify your settings by pressing the Enter key. NOTE: At any time during the editing of Data you can press the Stop key to go back one level, or screen.
7. If you want to increase or decrease the workload at any time during the program press the Up or Down key. This will allow you to change your target Watts at any time during the program.
8. During the **Watts** program you will be able to scroll through the data in the message window by pressing the adjacent **Display key**.

Custom User Defined Programs

There are two customizable User programs that allow you to build and save your own workout. The two programs, **User 1** and **User 2**, operate exactly the same way so there is no reason to describe them separately. You can build your own custom program by following the instructions below or you can save any other preset program you complete as a custom program. Both programs allow you to further personalize it by adding your name.

1. Press the **User 1** or **User 2** key. The Message Center will show a welcome message. If you had previously saved a program the message will contain your name. Then press the **Enter** key to begin programming.
2. If you have already saved a program to either **U1** or **U2**, it will be displayed and you are ready to begin. If not, you will have the option of inputting a username. In the **Message Window**, the letter "A" will be blinking. Use the Up/Down **Incline or Level** buttons to select the appropriate first letter of your name (pressing the **up** button will switch to the letter "B"; pressing the Down button will switch to letter "Z"). Press **Enter** when the desired letter is displayed. Repeat this process until all of the characters of your name have been programmed (maximum 7 characters). When finished press **Stop**.
3. If there is a program already stored in **User** when you press the key, you will have an option to run the program as it is or delete the program and build a new one. At the welcome message screen, when pressing **Start** or **Enter** you will be prompted: Run Program? Use the **Up/Down** arrows to select Yes or No. If you select No, you will then be asked if you want to delete the currently saved program. It is necessary to delete the current program if you want to build a new one.
4. The Message Center will ask you to enter your Age. You may enter your age, using the **Level Up/Down** keys, then press the **Enter** key to accept the new value and proceed on to the next screen.
5. You are now asked to enter your Weight. You may adjust the weight value using the **Up/Down** keys or the numeric key pad, then press **Enter** to continue.
6. Next is Time. You may adjust the time and press **Enter** to continue.
7. Now you are asked to adjust the Max Resistance Level of the program, press **Enter** when resistance has been selected.
8. Now the first column will be blinking and you are asked to adjust the resistance level for the first segment (SEGMENT > 1) of the workout by using the **Level Up** key. When you finish adjusting the first segment, or if you don't want to change, then press **Enter** to continue to the next segment.
9. The next segment will show the same workload resistance level as the previously adjusted segment. Repeat the same process as the last segment then press **Enter**. Continue this process until all twenty segments have been set.
10. Now you are asked to adjust the Max Incline Level of the program, press **Enter** when incline has been selected.
11. Now the first column will be blinking and you are asked to adjust the incline level for the first segment (SEGMENT > 1) of the workout by using the **Level Up** key. When you finish adjusting the first segment, or if you don't want to change, then press **Enter** to continue to the next segment.
12. The next segment will show the same workload incline level as the previously adjusted segment. Repeat the same process as the last segment then press **Enter**. Continue this process until all twenty segments have been set.
13. The Message Center will then tell you to press **Enter** to save the program. After saving the program the Message Center says "program saved" then will give you the option to Start or modify the program. Pressing **Stop** will exit to the start up screen.

Heart Rate Programs

Before we get started, a word about Heart Rate:

The old motto, “no pain, no gain”, is a myth that has been overpowered by the benefits of exercising comfortably. A great deal of this success has been promoted by the use of heart rate monitors. With the proper use of a heart rate monitor, many people find that their usual choice of exercise intensity was either too high or too low and exercise is much more enjoyable by maintaining their heart rate in the desired benefit range.


To determine the benefit range in which you wish to train, you must first determine your Maximum Heart Rate. This can be accomplished by using the following formula: 220 minus your age. This will give you the Maximum heart rate (MHR) for someone of your age. To determine the effective heart rate range for specific goals you simply calculate a percentage your MHR. Your Heart rate training zone is 50% to 90% of your maximum heart rate. 60% of your MHR is the zone that burns fat while 80% is for [strengthening](#) the cardiovascular system. This 60% to 80% is the zone to stay in for maximum benefit.

For someone who is 40 years old their target heart rate zone is calculated:

$220 - 40 = 180$ (maximum heart rate)
 $180 \times .6 = 108$ beats per minute (60% of maximum)
 $180 \times .8 = 144$ beats per minute (80% of maximum)

So for a 40 year old the training zone would be 108 to 144 beats per minute.

If you enter your age during programming the console will perform this calculation automatically. Entering your age is used for the Heart Rate control programs. After calculating your Maximum Heart Rate you can decide upon which goal you would like to pursue.

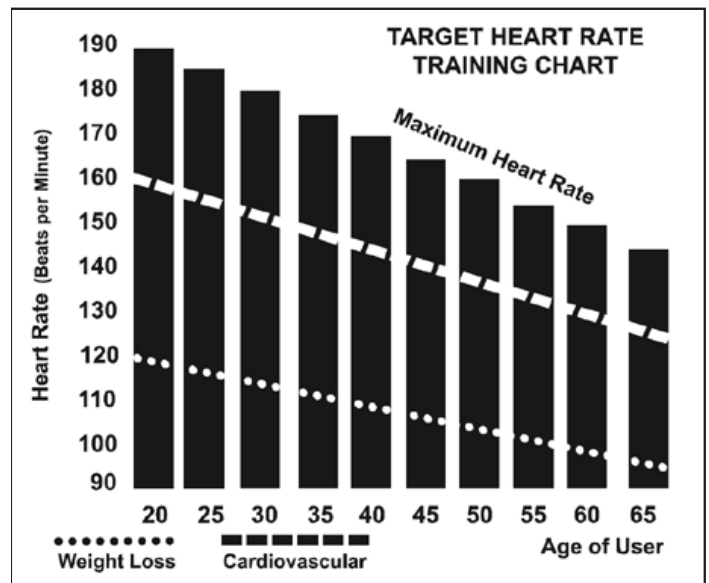

The two most popular reasons for, or goals, of exercise are cardiovascular fitness (training for the heart and lungs) and weight control. The black columns on the chart above represent the Maximum Heart Rate for a person whose age is listed at the bottom of each column. The training heart rate, for either cardiovascular fitness or weight loss, is represented by two different lines that cut diagonally through the chart. A definition of the lines' goal is in the bottom left-hand corner of the chart. If your goal is cardiovascular fitness or if it is weight loss, it can be achieved by training at 80% or 60%, respectively, of your Maximum Heart Rate on a schedule approved by your physician. Consult your physician before participating in any exercise program.

With all Heart Rate Control elliptical you may use the heart rate monitor feature without using the Heart Rate Control program. This function can be used during manual mode or during any of the nine different programs. The Heart Rate Control program automatically controls resistance at the pedals.

Rate Of Perceived Exertion

Heart rate is important but listening to your body also has a lot of advantages. There are more variables involved in how hard you should workout than just heart rate. Your stress level, physical health, emotional health, temperature, humidity, the time of day, the last time you ate and what you ate, all contribute to the intensity at which you should workout. If you listen to your body, it will tell you all of these things.

The rate of perceived exertion (RPE), also know as the Borg scale, was developed by Swedish physiologist G.A.V. Borg. This scale rates exercise intensity from 6 to 20 depending upon how you feel or the perception of your effort.

The scale is as follows:

Rating Perception of Effort


- 6 Minimal
- 7 Very,very light
- 8 Very,very light +
- 9 Very light
- 10 Very light +
- 11 Fairly light
- 12 Comfortable
- 13 Somewhat hard
- 14 Somewhat hard +
- 15 Hard
- 16 Hard +
- 17 Very hard
- 18 Very hard +
- 19 Very,very hard
- 20 Maximal

You can get an approximate heart rate level for each rating by simply adding a zero to each rating. For example a rating of 12 will result in an approximate heart rate of 120 beats per minute. Your RPE will vary depending up the factors discussed earlier. That is the major benefit of this type of training. If your body is strong and rested, you will feel strong and your pace will feel easier. When your body is in this condition, you are able to train harder and the RPE will support this. If you are feeling tired and sluggish, it is because your body needs a break. In this condition, your pace will feel harder. Again, this will show up in your RPE and you will train at the proper level for that day.

Using A Heart Rate Transmitter(OPTIONAL)

How to wear your wireless chest strap transmitter:

1. Attach the transmitter to the elastic strap using the locking parts.
2. Adjust the strap as tightly as possible as long as the strap is not too tight to remain comfortable.
3. Position the transmitter with the logo centered in the middle of your body facing away from your chest (some people must position the transmitter slightly left of center). Attach the final end of the elastic strap by inserting the round end and, using the locking parts, secure the transmitter and strap around your chest.
4. Position the transmitter immediately below the pectoral muscles.
5. Sweat is the best conductor to measure very minute heart beat electrical signals. However, plain water can also be used to pre-wet the electrodes (2 ribbed oval areas on the reverse side of the belt and both sides of the transmitter). It's also recommended that you wear the transmitter strap a few minutes before your work out. Some users, because of body chemistry, have a more difficult time in achieving a strong, steady signal at the beginning. After "warming up", this problem lessens. As noted, wearing clothing over the transmitter/strap doesn't affect performance.
6. Your workout must be within range - distance between transmitter/receiver – to achieve a strong steady signal. The length of range may vary somewhat but generally stay close enough to the console to maintain good, strong, reliable readings. Wearing the transmitter immediately against bare skin assures you of proper operation. If you wish, you may wear the transmitter over a shirt. To do so, moisten the areas of the shirt that the electrodes will rest upon.

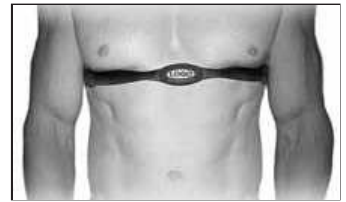

Note: The transmitter is automatically activated when it detects activity from the user's heart. Additionally, it automatically deactivates when it does not receive any activity. Although the transmitter is water resistant, moisture can have the effect of creating false signals, so you should take precautions to completely dry the transmitter after use to prolong battery life (estimated transmitter battery life is 2500 hours). The replacement battery is Panasonic CR2032.

ERRATIC OPERATION

Caution! Do not use this elliptical for Heart Rate Control unless a steady, solid Actual Heart Rate value is being displayed. High, wild, random numbers being displayed indicate a problem.

Areas to look for interference which may cause erratic heart rate:

1. Microwave ovens, TV's, small appliances, etc.
2. Fluorescent lights.
3. Some household security systems.
4. Perimeter fence for a pet.
5. Some people have problems with the transmitter picking up a signal from their skin. If you have problems try wearing the transmitter upside down. Normally the transmitter will be oriented so the logo is right side up.
6. The antenna that picks up your heart rate is very sensitive. If there is an outside noise source, turning the whole machine 90 degrees may de-tune the interference.
7. Loose treadmill console or bolts in the upright tube.
8. Another Individual wearing a transmitter within 3' of your machine's console.

If you continue to experience problems contact your dealer.

Heart Rate Program Operation

Note: You must wear the heart rate transmitter strap for these programs

Both programs operate the same, the only difference is that **HR1** is set to 60% and **HR2** is set to 80% of the maximum heart rate. They both are programmed the same way.

To start an HR program follow the instructions below or just select the **HR1** or **HR2** program, then the **Enter** button and follow the directions in the Message Center.

After selecting your heart rate target, the program will attempt to keep you at or within 3 - 5 heart beats per minute of this value. Follow the prompts in the Message Center to maintain your selected heart rate value.

1. Press the **HR 1** or **HR 2** key then press the **Enter** key.
2. The Message Center will ask you to enter your Age. You may enter your age, using the **Level Up/Down** keys, then press the **Enter** key to accept the new value and proceed on to the next screen.
3. You are now asked to enter your Weight. You may adjust the weight value using the **Level Up/Down** keys, then press **Enter** to continue.
4. Next is Time. You may adjust the time and press **Enter** to continue.
5. Now you are asked to adjust the Heart Rate Target. This is the heart rate level you will strive to maintain during the program. Adjust the level using the **Level Up/ Down** keys, then press **Enter**. *Note: The heart rate that appears is based on the % you accepted in Step 2.*
6. Now you are finished editing the settings and can begin your workout by pressing the **Start** key. You can also go back and modify your settings by pressing the **Enter** key.
7. If you want to increase or decrease the workload at any time during the program press the **Level Up/Down** key. This will allow you to change your target heart rate at any time during the program.
8. During the HR 1 or HR 2 programs you will be able to scroll through the data in the Message Center by pressing the **Enter** key.
9. When the program ends you may press **Start** to begin the same program again or **Stop** to exit the program.

General Maintenance

1. Wipe down all areas in the sweat path with a damp cloth after each workout.
2. If a squeak, thump, clicking or rough feeling develops the main cause is most likely one of two reasons:
 - i. The hardware was not sufficiently tightened during assembly. All bolts that were installed during assembly need to be tightened as much as possible. It may be necessary to use a larger wrench than the one provided if you cannot tighten the bolts sufficiently. I cannot stress this point enough; 90% of calls to the service department for noise issues can be traced to loose hardware or the rear rails being dirty.
 - ii. Dirt build-up on the rear rails and polyurethane wheels are also a source of noise. Noise from build-up on the rails can cause a thumping sound that you would swear is coming from inside the main body of the machine because noise travels, and is amplified, in the tubing of the frame. Clean the rails and wheels with a lint free cloth and rubbing alcohol. Stubborn build-up can be removed with your thumbnail or a non-metallic scraper, like the back edge of a plastic knife. After cleaning, apply a small amount of lubricant on the rails with your fingers or a lint free cloth. You only need a thin coat of lubrication, wipe off any excess.
3. If squeaks or other noises persist, check that the unit is properly leveled. There are 4 leveling pads on the bottom of the rear rails, use a 14mm wrench (or adjustable wrench) to adjust the levelers.


ENGINEERING MODE MENU

The console has built in maintenance/diagnostic software. The software will allow you to change the console settings from English to Metric and turn off the beeping of the speaker when a key is pressed for example. To enter the Engineering Mode Menu, press and hold down the **Start**, **Stop** and **Enter** keys. Keep holding the keys down for about 5 seconds and the Message Center will display Engineering Mode Menu. Press the **Enter** button to access the menu below:

- a. KeyTest (Will allow you to test all the keys to make sure they are functioning)
- b. LCDTest (Tests all the display functions)
- c. Functions (Press **Enter** to access settings and **Up** arrow to scroll)
 - i. Sleep Mode (Turn on to have the console power down automatically after 20 minutes of inactivity)
 - ii. Pause Mode (Turn on allow 5 minutes of pause, turn off to have the console pause indefinitely)
 - iii. ODO Reset (Resets the odometer)
 - iv. Unit Type (Press enter to select ENGLISH or METRIC)
 - v. Beep (Turns off the speaker so no beeping sound is heard)
 - vi. Motor Test (Press **Enter** to run the resistance motor up and down in a continuous loop. Display shows level setting and position sensor reading. Press **Stop** to end test.)
 - vii. Safety
 - viii. Elliptical/ e • Glide
 - ix. Incline On/Off (For e • Glide this is always off)
- d. Security (Allows the keypad to be locked to prevent unauthorized use)

Incline Calibration: If there is a problem with the incline, try running the calibration. Press the Start key, Level up key & Stop key at the same time. Hold them down for 5 seconds and the Incline calibration will start and run automatically. If the problem persists, contact service department.

Exploded View Diagram

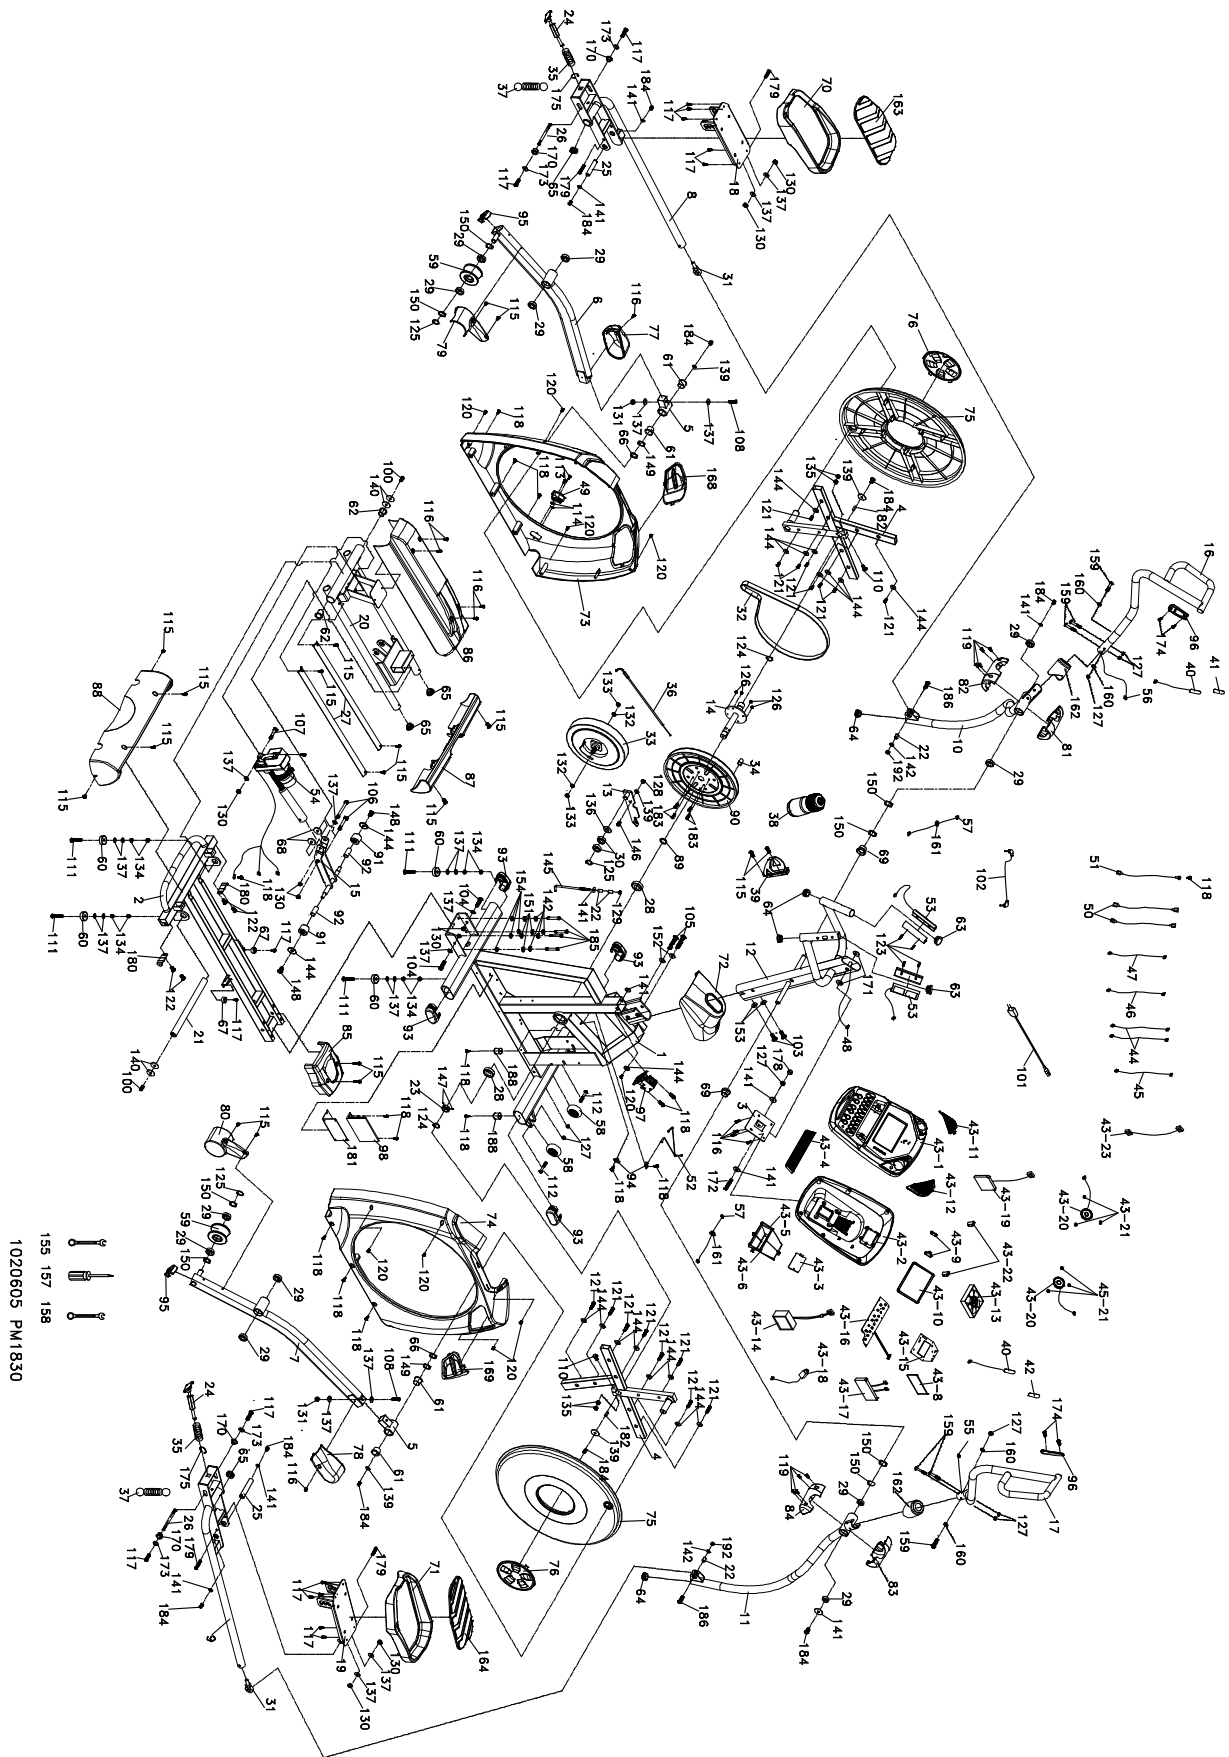

Parts List

NO.	DESCRIPTION	O'TY
1	Main Frame	1
2	Rail Base Assembly	1
3	Console Holder Assembly	1
4	Cross Bar	2
5	Bushing Housing, Pedal Arm	2
6	Pedal Arm (L)	1
7	Pedal Arm (R)	1
8	Connecting Arm (L)	1
9	Connecting Arm (R)	1
10	Lower Handle Bar (L)	1
11	Lower Handle Bar (R)	1
12	Console Mast	1
13	Idler Wheel Assembly	1
14	Crank Axle	1
15	Incline Device	1
16	Swing Arm (L)	1
17	Swing Arm (R)	1
18	Adjustable Pedal (L)	1
19	Adjustable Pedal (R)	1
20	Rear Rail Assembly	1
21	Locking Tube Assembly	1
22	Ø11.9 × Ø8.5 × 15m/m_Rod End Sleeve	4
23	Axle Stopper	1
24	Locking Pin Assembly	2
25	Axle for Pedal	2
26	Axle Of Locking Pin	2
27	Aluminum Rail	2
28	6005_Bearing	2
29	6003_Bearing	12
30	6203_Bearing	2
31	M12 × P1.75_Rod End Bearing	2
32	Drive Belt	1
33	Flywheel	1
34	Magnet	1
35	Latch Spring	2
36	Steel Cable	1
37	Pedal Tension Spring	2
38	Drink Bottle	1
39	Drink Bottle Holder	1
40	Resistance Button W/Cable	2
41	Handgrip Resistance Label (INCLINE)	1
42	Handgrip Resistance Label (LEVEL)	1

NO.	DESCRIPTION	O'TY
43	Console Assembly	1
43~1	Console Top Cover	1
43~2	Console Bottom Cover	1
43~3	Battery Cover	1
43~4	Deflector Fan Grill	1
43~5	Wind Duct (L)	1
43~6	Wind Duct (R)	1
43~8	Water-resist Rubber	1
43~9	Fan Fixing Plate	2
43~10	LCD Transparent Piece	1
43~11	Console Speaker Cover (L)	1
43~12	Console Speaker Cover (R)	1
43~13	400m/m_Fan Assembly(White)	1
43~14	300m/m_W/Receiver, HR	1
43~15	Console Display Board	1
43~16	Key Board	1
43~17	Interface Board	1
43~18	250m/m_Earphone socket with cable and securing metal	1
43~19	Amplifier Controller	1
43~20	250m/m_Speaker W/Cable	2
43~21	Speaker Grill Anchor	6
43~22	Fan Grill Anchor	2
43~23	250m/m_Amplifier Cable	1
44	850m/m_Connecting Wire, Controller(Red)	2
45	650m/m_Computer Cable	1
46	500m/m_Connecting Wire, Incline Motor Power Cord	1
47	550m/m_Connecting Wire, Incline Motor	1
48	1550m/m_Computer Cable	1
49	AC Input Module	1
50	80m/m_Connecting Wire (White)	2
51	200m/m_Ground Wire	1
52	450m/m_Sensor W/Cable	1
53	850m/m_Handpulse W/Cable Assembly	2
54	Incline Motor	1
55	450m/m_Handle Wire (Upper), Resistance	1
56	450m/m_Handle Wire (Upper), Incline	1
57	900m/m_Handle Wire (Lower), Resistance/Incline	2
58	Transportation Wheel	2
59	Ø78_Slide Wheel , Urethane	2
60	Ø35 × 10m/m_Rubber Foot	4
61	WFM-2528-21_Bushing	4
62	Ø38 × Ø34 × Ø26 × 4 + 16T_Bushing	2
63	Ø32(1.8T)_Button Head Plug	2
64	Ø32 × 2.0T_Round Cap	4

NO.	DESCRIPTION	Q'TY
65	32 x 2.5T_Round Cap	4
66	Ø25.5 x 33.5 x 1.5T_Nylon Wave Washer	2
67	26.5 x 6 x 10T_Rubber Foot Pad	2
68	3/8" x 35 x 5T_Nylon Washer	2
69	Ø30 x 19m/m_Upright Bushing	2
70	Pedal (L)	1
71	Pedal (R)	1
72	Console Mast Cover	1
73	Side Case(L)	1
74	Side Case (R)	1
75	Round Disk	2
76	Round Disk Cover	2
77	Pedal Arm Cover (L)	1
78	Pedal Arm Cover (R)	1
79	Slide Wheel Cover(L)	1
80	Slide Wheel Cover(R)	1
81	Front Handle Bar Cover (L)	1
82	Rear Handle Bar Cover (L)	1
83	Front Handle Bar Cover (R)	1
84	Rear Handle Bar Cover (R)	1
85	Bottom Cover	1
86	Incline Cover	1
87	Inclinable Rail Cover	1
88	Rear Bar Cover	1
89	Spacer Bushing	1
90	Ø330_Drive Pulley	1
91	Incline Transportation Wheel	2
92	PVC Bushing	2
93	Ø40 x Ø80_Oval End Cap	4
94	Sensor Rack	2
95	Oval End Cap	2
96	Handle Switch Bracket	2
97	Gear Motor	1
98	Incline Controller	1
100	5/16" x 1" _Hex Head Bolt	2
101	Power Cord	1
102	400m/m_Audio Cable	1
103	3/8" x 3/4" _Hex Head Bolt	2
104	3/8" x 1-1/2" _Hex Head Bolt	2
105	3/8" x 2-1/4" _Hex Head Bolt	2
106	3/8" x 2-1/2" _Hex Head Bolt	2
107	3/8" x 1-1/2" _Hex Head Bolt	1
108	3/8" x 2-1/4" _ Socket Head Cap Bolt	2
110	M8 x 40m/m_Socket Head Cap Bolt	2

NO.	DESCRIPTION	O'TY
111	3/8" x 1-3/4" _Flat Head Socket Bolt	4
112	5/16" x 1-3/4" _Button Head Socket Bolt	2
113	M4 x 12m/m _Phillips Head Screw	2
114	M4 x 5T _Nyloc Nut	2
115	M5 x 15m/m _Phillips Head Screw	18
116	M5 x 10m/m _Phillips Head Screw	10
117	M5 x 10m/m _Phillips Head Screw	16
118	5 x 19m/m _Tapping Screw	16
119	Ø3.5 x 12m/m _Sheet Metal Screw	8
120	3.5 x 16m/m _Sheet Metal Screw	9
121	5 x 16m/m _Tapping Screw	16
122	M6 x 10m/m _Phillips Head Screw	4
123	Ø3 x 20m/m _Tapping Screw	4
124	Ø25 _C Ring	2
125	Ø17 _C Ring	3
126	1/4" _Nyloc Nut	4
127	5/16" x 7T _Nyloc Nut	9
128	M8 x 7T _Nyloc Nut	1
129	M8 x 9T _Nyloc Nut	1
130	3/8" x 7T _Nyloc Nut	9
131	3/8" x 11T _Nyloc Nut	2
132	3/8" -UNF26 x 4T _Nut	2
133	3/8" -UNF26 x 11T _Nut	2
134	3/8" x 7T _Nut	8
135	M8 x 6.3T _Nut	4
136	Ø17 x 23.5 x 1T _Flat Washer	1
137	3/8" x 19 x 1.5T _Flat Washer	20
139	5/16" x 35 x 1.5T _Flat Washer	5
140	5/16" x 35 x 2.0T _Flat Washer	4
141	5/16" x 23 x 1.5T _Flat Washer	10
142	5/16" x 20 x 1.5T _Flat Washer	6
144	1/4" x 19m/m _Flat Washer	19
145	M8 x 170m/m _J Bolt	1
146	M8 x 20m/m _Carriage Bolt	1
147	M5 x 5m/m _Slotted Set Screw	2
148	M6 x 10m/m _Thumb Head Socket Screw	2
149	Ø25 _Wave Washer	2
150	Ø17 _Wave Washer	8
151	5/16" x 1.5T _Spring Washer	4
152	3/8" x 2T _Spring Washer	2
153	3/8" x 23 x 2T _Curved Washer	2
154	Ø5/16" _Star Washer	4
155	13/14m/m _Wrench	1
157	Phillips Head Screw Driver	1

NO.	DESCRIPTION	O'TY
158	12/14m/m_Wrench	1
159	5/16" × 1-3/4" _Hex Head Bolt	6
160	5/16" × 23 × 1.5T _Curved Washer	4
161	Switch Wire Cap	2
162	Swing Arm Bushing	2
163	Pedal Foam (L)	1
164	Pedal Foam (R)	1
168	Side Case Plate(L)	1
169	Side Case Plate(R)	1
170	Ø19 × Ø14 × Ø10 × (5+4)_Bushing	4
171	5/16" × 25 × 3T_Nylon Washer	2
172	5/16" × 2-1/2" _Hex Head Bolt	1
173	Ø5× 16 × 1.5T _Flat Washer	4
174	M5 × 20m/m _Flat Head Socket Screw	4
175	Ø10_C Ring	2
178	Ø13m/m _Bolt Cap	1
179	3/8" × 19m/m _Hex Head Bolt	4
180	Cover Holder(B)	2
181	Control Fixing Plate	1
182	7 × 7 × 19L_Woodruff Key	2
183	1/4" × 3/4" _Hex Head Bolt	4
184	5/16" × 15m/m _Hex Head Bolt	10
185	5/16" × 2-1/4" _Hex Head Bolt	4
186	5/16" × 1-1/4" _Hex Head Bolt	2
188	Ø25 × 25m/m _Rubber Foot Pad	2
192	5/16" × 9T_Nyloc Nut	2